WA15PA
WA14PA

Washing Machine
user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/global/register

SAMSUNG

WA15PALEP-02558E_EN.indd 1 2008-02-26 ¿ÀÀü 11:06:25

features of your new washer

1. The Silver Wash System

The winning combination! Samsung's silver technology combines the sanitizing effect of silver with state-of-the-art science for the ultimate clean wash! Two 99.9% pure silver plates are converted into silver ions via electrolysis. Even in cold, bleach-less water, the silver particles remove 99.9% of odor causing bacteria resulting in a "super clean" wash. Therefore, washing in cold water is energy efficient and beneficial to your laundry.

2. Air Turbo Drying System

Air Turbo technology spins hard and fast so you can spend less time drying.

Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.

Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

3. Diamond Drum

The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tube is both beautiful and powerful in the wash effect it creates.

4. Tempered Transparent Door

Lets you observe while the washer is operating. Check on your laundry's progress at any time.

5. Digital Control

The digital control selects the optimal washing course by automatically sensing the washload using artificial intelligence.

6. Magic Filter

The unique Magic Filter ensures that any and all lint inside the tub is captured for top quality filtering results that deliver a consistent and effective cleaning result.

7. Auto Restart

The power is turned on automatically after a power failure and simply continues the previous cycle. This saves time and ensures your wash is completed every time without fail.

8. Child-Lock Function

The Child-Lock function protects children from accidentally being hurt while playing with the washer.

This manual contains important information on the installation, use, and care of your new Samsung washer. Refer to it for descriptions of the control panel, instructions on how to use the washer, and tips for making the most of its state-of-the-art features and functions. The 'Troubleshooting and information codes' section on page 26 tells you what to do if something goes wrong with your new washer.

WA15PALEP-02558E_EN.indd 2 2008-02-26 ¿ÀÀü 11:06:26

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual means:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with all any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washer inside, away from exposure to weather.

Install and level your washer on a floor that can support its weight.

Your washer must be properly grounded. Never plug it into an ungrounded outlet.

Position the washer so that a wall plug is accessible after the installation is completed.

WA15PALEP-02558E_EN.indd 3 2008-02-26 ¿ÀÀü 11:06:26

safety information

To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washer. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washer.
- Under certain conditions, hydrogen gas may be produced in a hot water system – such as your hot water heater - that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water faucets in your home, and let the water flow for several minutes before using your washer. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washer.

Do not reach into the appliance when the tumbler is moving.

Do not reach under the appliance with your hands or with an object as you may be injured by the spinning board beneath the washer.

Do not let children play on or in your washer. The washer door does not open easily from the inside, and children may be seriously injured if trapped inside.

Do not let children attempt to look into the washer as falling into the washer is extremely dangerous and may be fatal.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Do not repair, replace, or service any part of your washer yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Store laundry detergents and other laundry supplies in a cool, dry place out of children's reach.

Disconnect the hoses and turn off the water when not using the washer.

If the power cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified person in order to avoid a hazard.

Do not forcefully bend the power cable or place any heavy objects on the cable.

Do not touch the power cord with wet hands.

Do not overload the power outlet with too many appliances.

WA15PALEP-02558E_EN.indd 4 2008-02-26 ¿ÀÀü 11:06:26

Do not install the washer nearby electrical implements and do not place any candles or cigarettes on the washer.

Do not go near the washer if it is flooded or under water, as there is a risk of electric shock. Unplug the washer and drain the water completely.

Do not combine chlorine bleach, ammonia, or acids (such as vinegar or rust remover) in the same wash. The fumes that can form when any of these items are combined are hazardous.

Do not machine wash fiberglass materials. Small particles can stick to fabrics washed in subsequent loads and cause skin irritation.

Before disposing of your washer, remove the door so that children or small animals cannot get trapped inside.

Connect the washer to the main water supply using a new set of hoses. Do not reuse an old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washer. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

If the washer does not stop within 15 seconds after you open the lid, call a service agent immediately.

Connect the grounding wire to the shell plate, and bury it under at least 10 in (25 cm) of earth: Alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe.

For washers with ventilation openings in the base, that a carpet must not obstruct the openings.

WA15PALEP-02558E_EN.indd 5 2008-02-26 ¿ÀÀü 11:06:26

contents

SETTING UP YOUR WASHER 7

7 Checking the parts and the control panel
9 Fuzzy course
9 Blanket course
10 Delicate course
10 Memory course
10 Clean Tub course
11 Quick course
11 Super Clean
11 ECO+ course
11 Delay Start
12 Silver Wash
12 Air Turbo
13 Manual functions
14 Installing your washer
14 Selecting a location
14 Connecting the water supply hose
15 Assembling the Protection Panel (Optional)
15 Connecting the drain hose
17 Adjusting the height of the washer

WASHING A LOAD OF LAUNDRY 18

18 Basic instructions
18 Laundry guidelines
20 Detergent and additives information
21 Washing for the first time
21 Automatic sensing function

CLEANING AND MAINTAINING YOUR WASHER 22

22 Keeping the tub clean
22 Cleaning the water supply connector filter
23 Cleaning the filter net
23 Cleaning the pump filter

TROUBLESHOOTING AND INFORMATION CODES 24

24 Check these points if your washer...
26 Information codes

SPECIFICATION 27

WA15PALEP-02558E_EN.indd 6 2008-02-26 ¿ÀÀü 11:06:26

setting up your washer

Be sure to have your installer follow these instructions closely so that your new washer works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS AND THE CONTROL PANEL

Carefully unpack your washer, and make sure you've received all the parts shown below. If your washer was damaged during shipping, or if you do not have all the parts, contact Samsung Customer Service or your Samsung dealer.

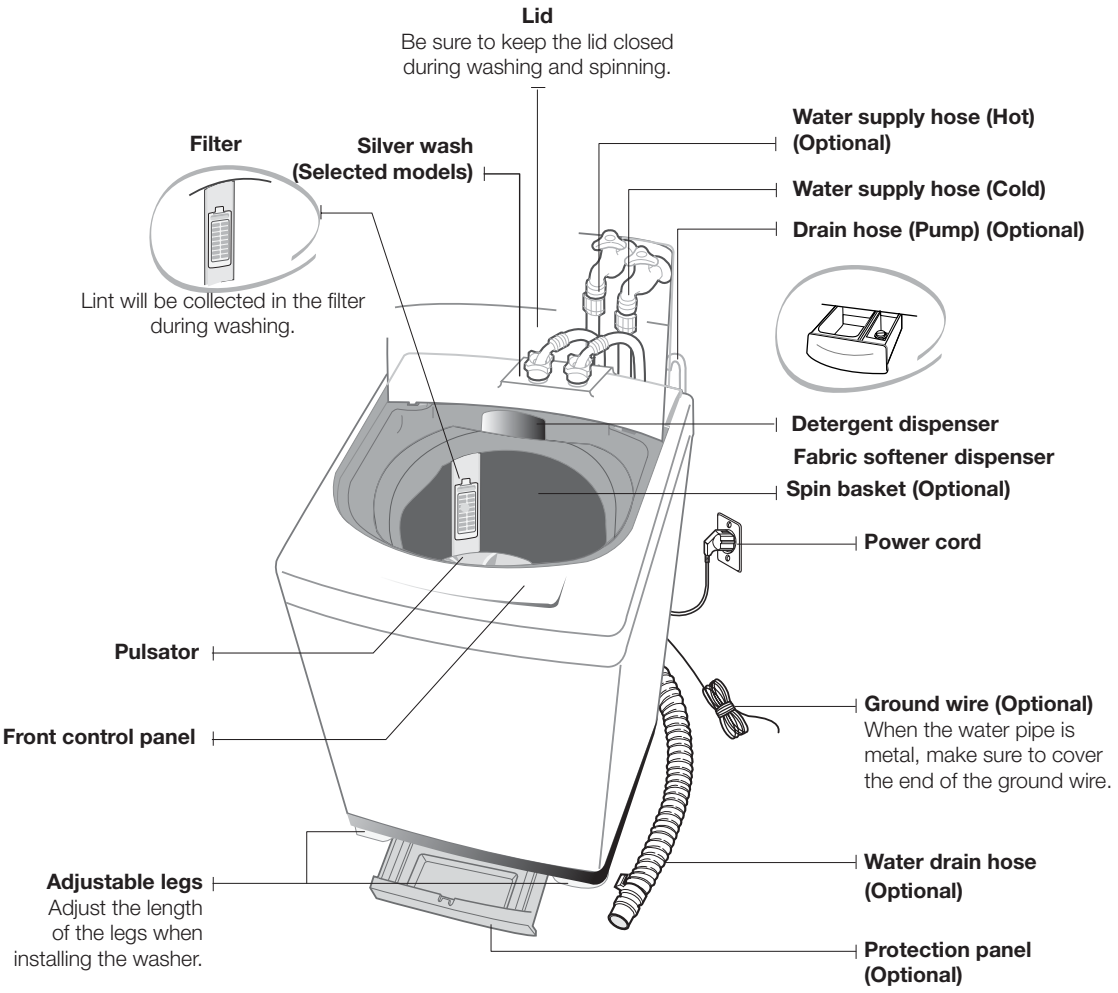
Lid
Be sure to keep the lid closed during washing and spinning.
Filter
Silver wash (Selected models)
Lint will be collected in the filter during washing.
Water supply hose (Hot) (Optional)
Water supply hose (Cold)
Drain hose (Pump) (Optional)
Detergent dispenser
Fabric softener dispenser
Spin basket (Optional)
Power cord
Pulsator
Front control panel
Ground wire (Optional)
When the water pipe is metal, make sure to cover the end of the ground wire.
Adjustable legs
Adjust the length of the legs when installing the washer.
Water drain hose (Optional)
Protection panel (Optional)

DC68-02558B_EN.indd 7 2007-12-12 ¿ÀÈÄ 6:38:25

setting up your washer

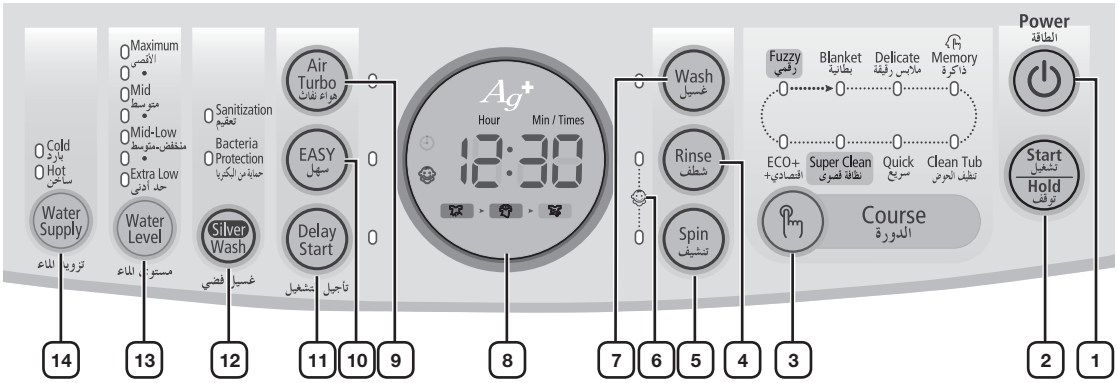

1 **POWER BUTTON**	Press this button once to turn the power on. Press it again to turn the power off.
2 **START/PAUSE BUTTON**	Press to pause and restart courses. To change the washing procedure during an operation, press this button to stop the operation, and press it again to restart the washer after changing the washing procedure.
3 **COURSE SELECTION BUTTON**	Press this button repeatedly to cycle through the washing courses: [Fuzzy → Blanket → Delicate → Memory → Clean Tub → Quick → Super Clean → ECO+]
4 **RINSE BUTTON**	Press this button to perform only the rinse cycle or to adjust the amount of rinse cycles.
5 **SPIN BUTTON**	Press this button to only perform a spin cycle or to adjust the spin time. When only a spin cycle is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time, the time for the water to drain and the washer to stop.
6 **CHILD-LOCK FUNCTION**	The child lock function allows you to lock the buttons so that the selected wash cycle can't be changed. (This is a device that prevents children from playing with the washer.) **Activating/Deactivating:** Press both the **Rinse** and **Spin** buttons at the same time for 3 seconds. (Note: This function cannot be performed without the "Power" being on.)
7 **WASH BUTTON**	Press this button to only perform a wash cycle or to adjust the wash time.
8 **REMAINING TIME, DELAY START TIME, ERROR DISPLAY**	The display shows the remaining wash time, the reserved delayed start time and error messages.
9 **AIR-TURBO BUTTON**	Press this button to fast-dry your laundry. Press this button to toggle between the Air-Turbo options: On → Off → On This function can only be selected if a spin cycle has been set.
10 **EASY BUTTON**	If you choose EASY, you will enjoy full access to all of Samsung Washing Machine's userfriendly functions at your fingertips. When selecting this course, Air Turbo and Silver wash are selected automatically.
11 **DELAY START BUTTON**	Press this button to finish the wash at a specified time. Turn your washer off to cancel a previously delayed start time. You can set the delayed start time from between 3 to 18 hours.

WA15PALEP-02558E_EN.indd 8 2008-02-26 ¿ÀÀü 11:06:28

12 **SILVER WASH BUTTON**	This is a cycle where silver water is supplied during the wash cycle as well as during the last rinse, with additional sterilization and antibacterial coating. Silver Wash cannot be selected if only hot water is selected. **Sanitization:** Silver water is added to the water supply to perform an antibiotic sanitary wash. **Bacteria Protection:** Silver water is supplied during the last rinse after the wash to apply an antibacterial coating to the laundry. This is a sterilized rinse function that prevents the propagation of bacteria. This is available for all courses except for the Delicate course.
13 **WATER LEVEL BUTTON**	The water level is automatically adjusted. However, you can select the water level manually by repeatedly pressing this button.
14 **WATER SUPPLY BUTTON (Optional)**	Press this button repeatedly to cycle through the water options: Cold → Hot → Cold To change the water options, turn off the Silver Water function.

Fuzzy course

Use this course to automatically select the optimal washing course.

1. Press the **Power** button to turn the washer "On".
2. Press the **Start/Pause** button. The water level is selected automatically.
3. The wash, rinse, and spin cycles follow.
4. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
5. Close the lid.

Blanket course

Use this course for big volume laundry items such as blankets and bed cover sheets.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Pasue** button. The water level is selected automatically.
4. The wash, rinse, and spin cycles follow.
5. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
6. Close the lid.

- Do not wash electric blankets and carpets.
- Fold big volume laundry items (blankets and bed cover sheets) in the following way before adding them into the spin basket.
- Purchase a laundry net for light and big volume laundry items (e.g. cashmere, blankets) as they may rise to the top of the washer and become damaged.

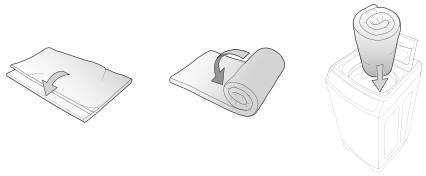

WA15PALEP-02558E_EN.indd 9 2008-02-26 ¿ÀÀü 11:06:29

Delicate course

Use this course to wash delicate clothing items such as washable sweaters, cardigans, and other delicate items.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Pause** button. The water level is automatically selected at the mid-level between Mid-low and Extra low. You can also adjust the water level manually.
4. The wash, rinse, and spin cycles follow.
5. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
6. Close the lid.

- You can select only Cold water.
- The last spin cycle is a light cycle to prevent wrinkles.
- Use only detergent indicated by the laundry.
- Refer to the Care Label on the clothing for the appropriate wash information.
- Make sure buttons are fastened and that clothing is turned inside out.
- In the Delicate course, Air Turbo and Silver Wash functions cannot be selected as it may damage delicate items.

Memory course

Use this course to create your very own favorite or frequently used courses and store them in the washer so that you can select them at any time.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Select your frequently used functions.
   Select Wash, Rinse, Spin or Silver Wash according to your requirements.
4. Press the **Start/Pause** button to store them.

Only stored when the Wash + Rinse + Spin steps are selected.

5. Add detergent and softener according to the water level and close the lid.

- If you select the Memory course after turning the washer "On", the stored settings are automatically retrieved.
- To change the stored settings, select the Memory course, reconfigure the settings and then press the **Start/Pause** button. Then, the changes are stored.

Clean Tub course

Use this course to clean the tub. It will keep the tub clean and sanitary.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Hold** button.
4. Add a delicated detergent and close the lid.

- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
- When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.
- The Soak function is set automatically.
- The initial water level is selected at the mid-level between Maximum and Mid.

WA15PALEP-02558E_EN.indd 10 2008-02-26 ¿ÀÀü 11:06:29

Quick course

The Quick course is good for light or slightly stained laundry.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Pause** button. The water level is selected automatically.
4. The wash, rinse, and spin cycles follow.
5. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
6. Close the lid.

Super Clean

Use this course to achieve the cleanest wash.
This course provides you with the optimum in washing performance through the 5-step super clean system.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Pause** button. The water level is selected at the mid-level between Mid and Mid-low.

The water level is selected between Maximum and Mid or at the mid-level between Mid and Mid-low.

4. Close the lid.

ECO+ course

If you want to wash those frequently used towels or less dirty laundry time. Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to turn the washer "On".
2. Press the **Course** select button.
3. Press the **Start/Pause** button.
4. The wash, rinse, and spin cycles follow.
5. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
6. Close the lid.

Delay Start

Use this to specify a time for the wash cycle to start, for example, when you need to go out and are unable to monitor the washer.

1. Press the **Power** button to turn the washer "On".
2. Press the **Delay Start** button once.
   You may set the delay end time using the **Delay Start** button from between 3 to 18 hours.
3. Press the **Start/Pause** button and add the appropriate amount of detergent into the detergent drawer.
4. Close the lid.
   The wash will finish by the set time.
   Add detergent and softener according to the water level and close the lid.

- Detergent must be added into the detergent drawer.
- If detergent is added onto the laundry directly, some clothes may become discolored because the start has been delayed.
- To cancel a Delay Start, press the **Power** button.

WA15PALEP-02558E_EN.indd 11 2008-02-26 ¿ÀÀü 11:06:30

Silver Wash

This course kills bacteria in your laundry during the wash or rinse cycle protecting you and your family from harmful bacteria.

1. Press the **Power** button to turn the washer "On".
2. Press the **Silver Wash** button.
3. Press the **Start/Pause** button. The water level is selected automatically.
4. The wash, rinse, and spin cycles follow.
5. To pause a course, press the **Start/Pause** button again. You can change the course when it is paused.
6. Close the lid.

This can only be selected when the wash, einse and spin cycles are all selected.

- When the Silver Wash course is selected, manually selecting the **Water Supply** button is not operated.
- This is available as an option for all courses except for the Delicate course.

Air Turbo

This course saves you valuable time, ensuring that your clothes dry faster than from line drying.

1. Press the **Power** button to turn the washer "On".
2. Press the **Air Turbo** button.
   Each time the Air Turbo button is pressed, the operations are performed in the following order: On → OFF → On
3. Close the lid.
4. Press the **Start/Pause** button.

- This can be selected as an additional option for all courses except for Delicate and Clean Tub course.
- The Air Turbo function is only available when spin cycle is selected.
- Select this when you want to half-dry the laundry.

WA15PALEP-02558E_EN.indd 12 2008-02-26 ¿ÀÀü 11:06:30

MANUAL FUNCTIONS

It is possible to select cycles manually.
(Example) A basic wash for lightly soiled laundry:
Power → Select the Quick course → Wash → Start/Pause

COURSE	INSTRUCTIONS
WASH ONLY 	Press the **Power** button. Press the **Wash** button. Press the **Start/Pause** button. When the **Wash** button is pressed while washing is in progress, the wash time can be changed to between 6 and 30 minutes.
RINSE ONLY 	Press the **Rinse** button. Press the **Start/Pause** button. The rinse cycle is performed twice. When the **Rinse** button is pressed during the rinse cycle, the rinse time can be changed to between 2 to 5 times in duration.
SPIN ONLY 	Press the **Spin** button. Press the **Start/Pause** button. When the **Spin** button is pressed during the spin course, the spin time can be changed to 1 to 9 minutes.
WASH AND RINSE 	Press the **Wash** and **Rinse** buttons. Press the **Start/Pause** button once. The cycle detects the amount of laundry, and automatically determines the wash and rinse times. When the **Wash** and **Rinse** buttons are pressed while the washer is in progress, the wash time is determined between 6 and 30 minutes, and the rinse time is determined between 1 and 5 times.
RINSE AND SPIN 	Press the **Rinse** and **Spin** buttons. Press the **Start/Pause** button once. The rinse and spin cycles are performed. When the **Rinse** and **Spin** buttons are pressed while the washer is operating, the number of rinse cycles is determined between 2 and 5 times, and the spin time is determined between 1 and 9 minutes.
WASH, RINSE AND SPIN 	Press the **Wash**, **Rinse** and **Spin** buttons. Press the **Start/Pause** button once. The wash, rinse and spin cycles are performed.

WA15PALEP-02558E_EN.indd 13 2008-02-26 ¿ÀÀü 11:06:33

setting up your washer

INSTALLING YOUR WASHER

Selecting a location

Before you install your washer, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation and avoid vibrations
- Allows at least 4 in (10 cm) between the washer and the wall
- Is away from direct sunlight and not exposed to rain as moisture may destroy the electrical insulation causing an electrical shock hazard
- Has adequate ventilation
- Is not exposed to temperatures below freezing (below 32 ˚F and 0 ˚C)
- Is away from heat sources such as oil and gas
- Has enough space so that your washer doesn't stand on its power cable

Connecting the water supply hose

Connecting the hose to the faucet

1. Remove the adaptor from the water supply hose.



2. Loosen the four screws on the adaptor using a "+" type screwdriver. Then take the adaptor and turn part (b) following the arrow until there is a gap of about 0.2 in (5 mm) between part a and b.

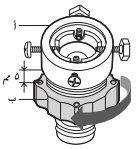

3. Connect the adaptor to the water tap by tightening the screws firmly. Then turn part (b) following the arrow, and push (a) and (b) together.

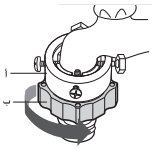

4. Connect the water supply hose to the adaptor. Pull part (c) (water supply hose) downwards. When part (c) is released, the hose is automatically connected to the adaptor and makes a 'clicking' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

OR

Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.

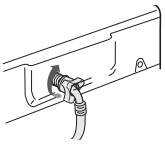

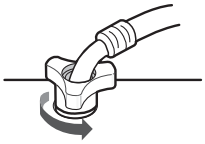

WA15PALEP-02558E_EN.indd 14 2008-02-26 ¿ÀÀü 11:06:35

If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.

If after completing the connection water leaks from the hose, repeat the same steps again. Use the most conventional type of faucet for the water supply. If the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

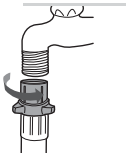

Assembling the Protection Panel (Optional)

1. Push and insert the Protection panel towards the back through the insert hole from the front.

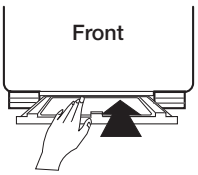

2. If you have difficulty inserting the panel, lift the washer up a little and then insert it.

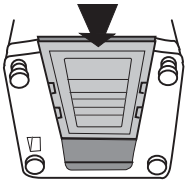

The protection panel is not applied in some models

Connecting the drain hose

For non-pump drained washers

1. Press the joint ring and place it around the drain hose.

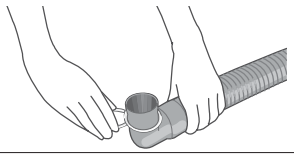

2. After placing the drain hose into a drain outlet, join the other end of the hose to the drain outlet of the washer.

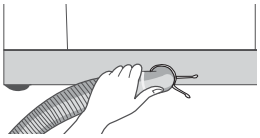

3. Ensure that they are connected tightly by pressing the joint ring and pushing it into the drain-outlet.

- The length of drain hose is adjustable so that it can be extended to the appropriate length.



Changing the direction of the drain hose

- Press the handle of the joint ring to pull out the drain hose. Change the direction of the drain hose and follow the above guidelines again.

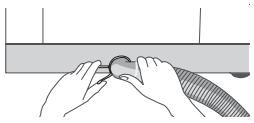

WA15PALEP-02558E_EN.indd 15 2008-02-26 ¿ÀÀü 11:06:37

setting up your washer

CAUTION

Caution when inserting the drain hose

1. When extending the hose to another hose, the length should not exceed more than 118.1 in (3 m).

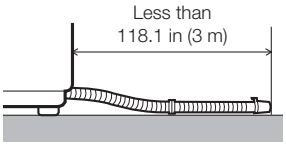

2. Ensure that the end of the drain hose is lower than the water level for the water to drain properly.

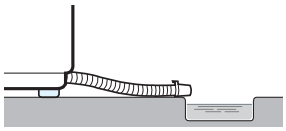

3. The drain hose should not have any obstacles higher than 2 in (5 cm) in their path.

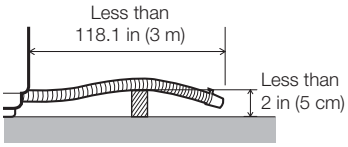

4. Don't install the drain hose underneath the washer.

For pump-drained washers

1. Remove the cap-hose and connect the outlet-hose.

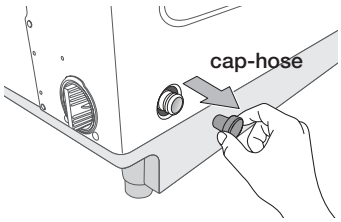

2. Ensure that the drain hose is connected tightly to the drain-outlet on the side of the washer.

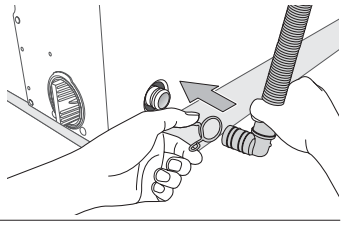

3. Install the drain hose about 35~39 in (90~100 cm) above the ground.

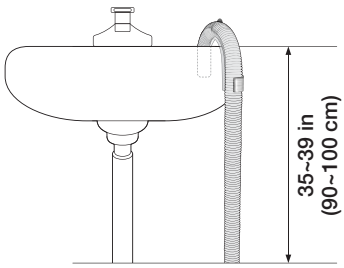

WA15PALEP-02558E_EN.indd 16 2008-02-26 ¿ÀÀü 11:06:39

Adjusting the height of the washer

Make sure your washer is level by adjusting the leveling legs.

CAUTION Beware of catching your hands under the legs.

1. Pull the handles located at the right and left front of the washer and slide them off.
2. Adjust the height of the washer upwards or downwards.
3. When you have finished adjusting the height, push the handles back to fix the adjusting legs in place.

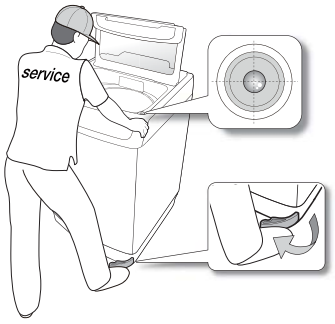

Waterdrop mark	Cause	How to level
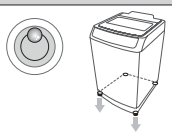	The front of the washer is lower	Level the washer by adjusting the legs.
	The back of the washer is lower	Adjust the height by using the props at the back.
	The left of the washer is lower	Adjust the left side by using the adjustable legs at the front and props at the back.
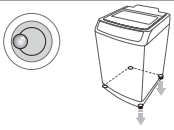	The right of the washer is lower	Adjust the left side by using the adjustable legs at the front and props at the back.

Leveling your washer with the leveling screws (Optional)

1. Gently lift up the washer and turn the adjustable legs to the left to find the optimal balance.

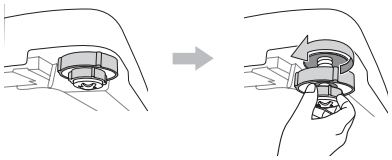

2. When done, return the washer to its original position.

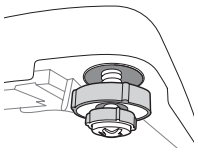

3. After adjusting the legs, do not forget to lock the nut for safety reasons. (Failing to do so may cause it to become loose and and move out of position.)

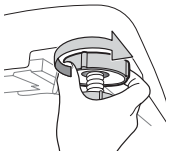

WA15PALEP-02558E_EN.indd 17 2008-02-26 ¿ÀÀü 11:06:43

washing a load of laundry

With your new washer, the hardest part of doing laundry will be deciding which load to do first.

BASIC INSTRUCTIONS

1. Load your laundry into the washer.
2. Close the door.
3. Turn the power on.
4. Add detergent and additives into the dispenser (see page 20).
   Select the appropriate course and options for the load (see pages 9-12). The Wash Indicator light will illuminate and the estimated course time will appear in the display.
5. Press the **Start/Pause** button.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash. (It is important that the checkpoints below are followed in order to avoid machine problems or clothing damage.)

If any problems arise due to the fault of the customer, a separate service fee will be charged to the customer.

Always check the Care label on clothing before washing.

- You can fill the tub with dry, unfolded clothes; but do NOT OVERLOAD the tub. Overloading may reduce washing efficiency, cause excess wear on your laundry and the washer, and possibly cause creasing or wrinkling of the load.
- When washing big, bulky items or a few smaller items that don't fill the tub completely - a rug, a pillow, stuffed toys, or one or two sweaters, for example - add a few towels to improve the tumbling and spinning performance.
- Check if any clothing items may bleach. Add liquid detergent to a white towel and the garment if you are unsure whether it may bleach. Rub the two items together strongly. Check if the color is transferred to the towel.
- Be especially careful with scarves and imported clothes since they discolor easily. Check for stains or partial dirt. If stains are found, add some detergent to a cloth and rub the stain in a single direction. Soil and dirt may rub against delicate garments causing damage and the wash result may be unsatisfactory.
- If clothes are too soiled, remove them and wash them separately, as dirt may transfer to the other clothing.
- Before washing the following items, sleeves, collars, dress hems and pockets should be pre-treated by brushing them with detergent. Wrinkle-processed clothing made of wool should be specially treated by tying them together (using thread) before washing. The thread is removed after the clothes have dried.
- Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If pants and jacket zips are open during the wash, the spin basket may be damaged. Zips should be closed before washing.
- Clothing with long strings may become entangled with other clothes and damage them. Be sure to fix the strings before starting the wash.
- Turn delicate clothing inside out before washing it.

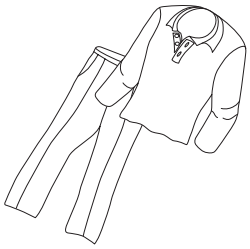

WA15PALEP-02558E_EN.indd 18 2008-02-26 ¿ÀÀü 11:06:44

- Wash black clothing and cotton towels separately. If these are washed together, the towels may become stained. Check before washing.
- Curtains, light garments or blue jeans should not float. If they are floating, stop the washer by pressing the **Start/Pause** button and press them them down until they are soaked in the water. If the wash continues with floating clothing, it may damage the laundry and the washer, as well as resulting in an unsatisfactory washing result.

CAUTION Check all pockets before washing! Hairpins and coins may damage your clothing as well as your washer. It is important that you check pockets for objects and remove them.

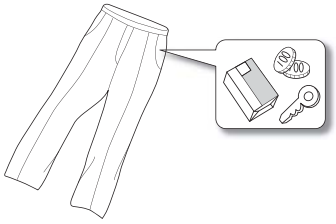

Do NOT wash the following items

- Clothing that is easily disfigured even when simply soaking in water.
- Neckties, brassieres, jackets, suits and coats that are made mostly of rayon and other kind of blended fabrics can be easily disfigured (e.g. shrinkage and discoloration).
- Wrinkle-processed, embossed, or resin processed products that are easily disfigured even when simply soaking in water.
- Easily discolored products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessories.
- Do not wash waterproof clothing (e.g. ski wear, diaper covers and matts/rugs). This may cause the laundry to be ejected or cause the washer to vibrate abnormally, which may result in personal injury or damage to the washer, the floor or the clothing. When the tub rotates, water may become trapped in the waterproof clothing or fabric and can collect in a corner, causing abnormal vibrations. In addition, the laundry rises and may be ejected and cause personal injury.

Use a laundry net to wash the following items

- Use only commercial laundry nets.
- Place delicate clothes in a laundry net.
- Cashmilon and garments with a big volume and lightweight (e.g. lace decorated clothing, lingerie, nylon stockings, synthetic fabrics, etc.) may rise to the top of the washer and damage clothing and the washer. Use a laundry net or wash these items separately.
- Place long stringed and lace decorated clothing, bed cover sheets, and woolen clothes into a laundry net before washing them.

WA15PALEP-02558E_EN.indd 19 2008-02-26 ¿ÀÀü 11:06:44

washing a load of laundry

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

Use powdered or liquid detergent. Do not use soap as the tub may become dirty from dirt on it.

- When the detergent does not dissolve properly, use warm water to dissolve the detergent.
- Use the appropriate amount of detergent.

CAUTION Even if an excessive amount of detergent is used, there is little difference in the washing result. However, It may damage the garments as there may be insufficient rinsing.

- Bleaching agents may cause damage to garments as they are a strong alkali.
- Perform sufficient rinsing as powdered detergent can easily remain on the garments causing bad odors.
- If too much detergent is used or cold water is used, the detergent doesn't dissolve completely and remains on the garments, hose or spin basket, contaminating the laundry.
- For a delayed start, the detergent must be added into the detergent drawer. If powder detergent is spread directly onto the laundry, it may cause discoloration.

Detergent drawer

The detergent drawer is located inside the washer at the back.

Adding detergent

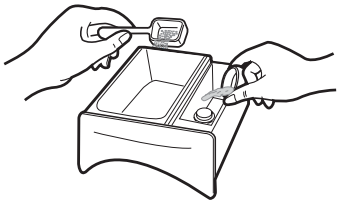

1. Open the detergent drawer and then add the powder detergent into the detergent compartment.
2. Add detergent evenly so that it doesn't brim over the edge of the drawer.

CAUTION
- Use a reasonable amount of detergent. If you use more detergent than the standard quantity or the water temperature is too low and the detergent does not dissolve in the water completely causing it to remain on the laundry and in the hose and tub, it may cause damage such as dirtying and discoloring the laundry.
- If you use a powder detergent and it remains on the laundry, it may cause a bad odor. Rinse the laundry sufficiently in fresh water.
- If you spread a powder detergent over the laundry directly, it may result in discoloration. Make sure to insert it into the detergent compartment.

If the water pressure is low, the detergent may remain in the detergent compartment.

Adding fabric softener

1. When the proper amount (one time dose) of fabric softener is stored in the softener inlet, it is automatically added during the last rinse cycle.
2. Do not add detergent, bleach or starch into the softener inlet.
3. Using too much softener may produce unsatisfactory results.
4. Do not open the lid during the Spin cycle. If added too early, its effectiveness will decrease.
5. Do not leave the softener in the softener dispenser for a long time as it may congeal.

If the water pressure is low, the fabric softener may remain in the softener compartment. In this case, put the fabric softener into the tub directly.

WA15PALEP-02558E_EN.indd 20 2008-02-26 ¿ÀÀü 11:06:45

WASHING FOR THE FIRST TIME

Before starting to wash, check the following:

1. Connect the water supply hose to the water tap. Open the tap. Connect the power to the washer. Ensure that the drain hose is placed properly.
2. Make the drain hose in installed properly.

Before performing a wash for the first time, you must run a complete cycle without adding any laundry.

1. Press the **Power** button.
2. Open the detergent drawer and insert a little detergent.
3. Turn on the water supply to the washer.
4. Press the **Start/Pause** button.

This will remove any water remaining from the manufacturer's test run.

AUTOMATIC SENSING FUNCTION

Your washer is equipped with an automatic sensing function which automatically senses the amount of laundry and the appropriate water level, wash time, rinse cycle, and spin time.

This does not apply for the Delicate, Clean tub and Super clean courses.

After the power is on, a course is selected and the **Start/Pause** button is pressed, the washing board starts spinning without water. This action senses how much laundry is in the washing basket, and this is not a machine problem. After the sensing process has completed, water is supplied automatically.

Place the laundry into the washer and add detergent.

- Be careful not to overload the washer. Use the appropriate detergent for the type of fabrics you are washing.
- If the lid is opened while the washer is running, the washer stops automatically for safety reasons. (However, the water supply continues while the lid is open.)
- When hot or warm water is selected, cold water is supplied for the first few seconds in order to protect the clothes.
- It is possible to control the wash time, rinse cycle, and spin time for every cycle during the wash course.

WA15PALEP-02558E_EN.indd 21 2008-02-26 ¿ÀÀü 11:06:45

cleaning and maintaining your washer

Keeping your washer clean improves its performance, wards off unnecessary repairs, and lengthens its life.

KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various airborne bacteria may stick to the tub and form mold, causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading the "Clean tub course" section on page 12 and using a dedicated or recommended detergent to clean the tub regularly at least once every one to three months.

CLEANING THE WATER SUPPLY CONNECTOR FILTER

1. Remove the filter and wash it thoroughly.

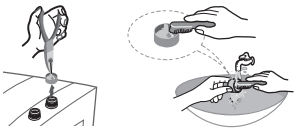

2. Return the filter to its place and securely connect the hose to the inlet water valve.

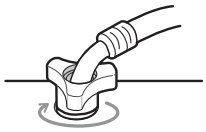

3. Check if there is any water leakage.
Ensure that the connector is connected tightly.

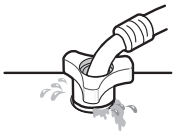

WA15PALEP-02558E_EN.indd 22 2008-02-26 ¿ÀÀü 11:06:46

CLEANING THE FILTER NET

Clean the filter net regularly to keep the washer clean.

1. Push and pull the upper part of the Magic filter downwards at the same time.

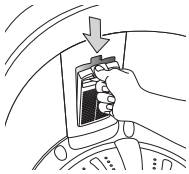

2. Open the cover as shown in the figure.

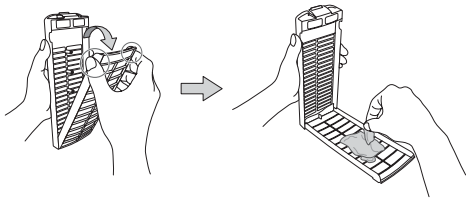

3. Clean the Magic filter.

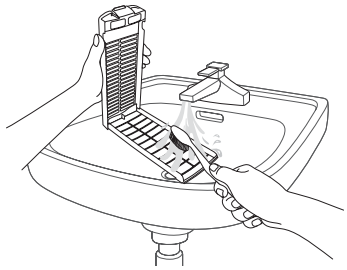

4. Close the cover and first insert the lower part of the filter into the basket and then push the filter until you hear a “clicking” sound.

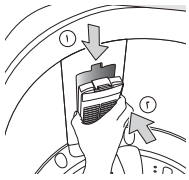

CLEANING THE PUMP FILTER

1. Place a rag or towel under the wash filter to avoid wetting the floor, and rotate the filter counterclockwise and pull it out.
2. Remove any dirt from the filter.
3. Return the filter to its place by rotating the filter clockwise until it locks into position.

1

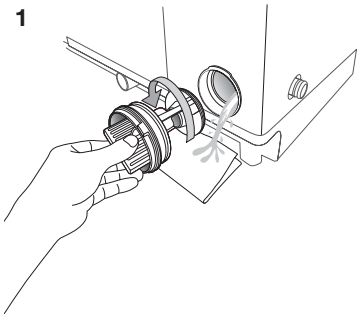

2

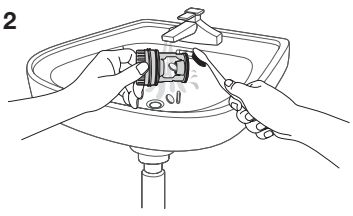

3

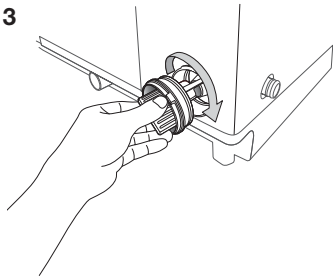

WA15PALEP-02558E_EN.indd 23 2008-02-26 ¿ÀÀü 11:06:49

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHER...

PROBLEM	CHECK & SOLUTION
Has no power.	Check if the electric voltage is normal.
	Check if the washer is plugged in. Make sure the electric cord is plugged in.
	Make sure that the drain hose is not twisted or folded.
	Make sure that the drain hose outlet is not clogged.
Does Not Work	Is the washer lid open? ➲ Close the lid.
	Is the Hold button on? ➲ Press the Start/Pause button again, and check if the washer starts.
	Has sufficient water filled up to the water level? ➲ If the water pressure is low, it takes along time for water to fill the washer.
	Is the faucet closed? ➲ Open the faucet to supply water.
Has the drain hose and spin basket frozen.	• Add hot water to the frozen water tap and remove the drain hose. Soak it in hot water. • Pour hot water into the spin basket for about 10 minutes. • Place a hot water towel on the drain hose connector. • When the drain hose has been defrosted, reconnect it and check if the water is draining properly.

WA15PALEP-02558E_EN.indd 24 2008-02-26 ¿ÀÀü 11:06:49

PROBLEM	CHECK & SOLUTION
The water leaks at the water supply hose connector.	If the faucet connecting part is loose, water may leak. ➲ Repeat the assembling steps again. (Refer to “Connecting the water supply hose”)
	Check if the rubber ring of the water supply hose is in the right position. ➲ Fit it tightly again.
	Is the water supply hose folded? ➲ Unfold the hose.
	If the water supply is too strong, water may leak. ➲ Close the faucet a little.
	Is water leaking from the faucet itself? ➲ Fix the faucet. Water is not supplied.
	Did you press the Start/Pause button after selecting the water supply? ➲ The Start/Pause button must be pressed for water, for water to be supplied. Press the Start/Pause button.
	Make sure that the faucet is on. ➲ Turn on the faucet.
	Check if the filter net at the water supply hose connector is clogged with dirt. ➲ Clean the filter net using a toothbrush.
	Make sure the water supply is on. ➲ If the water supply is suspended, turn both the faucet and power on.
Spinning causes loud noises and vibrations.	Check if the laundry is spread out evenly in the washer. ➲ Spread out the laundry evenly and start again.
	Check if the washer is balanced and level on a sturdy flat floor surface. ➲ Ensure that the washer is level.
	Check if the leveling legs are loose. ➲ Adjust the leveling legs so that the washer is even.
	Ensure that the washer is not surrounded with unnecessary items. ➲ Remove anything unnecessary away from the washer.

WA15PALEP-02558E_EN.indd 25 2008-02-26 ¿ÀÀü 11:06:49

troubleshooting and information codes

INFORMATION CODES

When your washer malfunctions, you may see an information code on the display. If that happens, please check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	PROBLEM	CHECK
	Will not start.	- Make sure the water source faucets are on. - Make sure the washer is plugged in. - Make sure the power is on. - Make sure there is enough water.
5E	**Does not drain.**	- Is the drain hose down?(No pump) - Check if the drain hose is frozen. - Check if the drain hose is clogged. - If the water does not drain within 15 minutes, a buzzer will sound, and the remaining time indicator will show “5E”.
4E	**Has no water.**	- Turn the faucets on fully. - Has the water supply to the residence been cut off? - Check if the water supply hose or hose connection is clogged. - Check if the water faucet is frozen. - If water supply is not finished within 1 hour or water level is not changed within 4 minutes, a buzzer will sound, and the remaining time indicator will show “4E”.
UE dE	**Does not spin.**	- Check that the laundry is spread out evenly in the washer. - Check that the washer is balanced and on a sturdy flat surface.
IE OE	**Overflows(water).**	- Restart after spinning. - If the error sign is still displayed, call a customer service agent.

WA15PALEP-02558E_EN.indd 26 2008-02-26 ¿ÀÀü 11:06:51

specification

MODEL		WA14PA	WA15PA
MAX. MASS OF DRY CLOTH IN kg		12 kg	13 kg
WASHING TYPE		Stirring Type	
POWER CONSUMPTION	WASH	600 W	
	SPIN	330 W	
DIMENSIONS (mm)		W630 x D675 x H1010	
WEIGHT		45 kg	
STANDARD WATER LEVEL	MAXIMUM	88 ℓ	
	MID	64 ℓ	
	MID-LOW	45 ℓ	
	EXTRA LOW	35 ℓ	
WATER PRESSURE		0.05MPa ~ 0.78 Mpa (0.5 ~ 8.0 kg·f/cm^2)	
WATER USAGE		230 ℓ	
SPIN SPEED		680 rpm	

WA15PALEP-02558E_EN.indd 27 2008-02-26 ¿ÀÀü 11:06:51

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/mea

Code No. DC68-02558E_EN

WA15PA
WA14PA

الغسالة

دليل المستخدم

إمكانيات هائلة

شكراً لشراء هذه الغسالة من Samsung.
للحصول على خدمة أكثر تكاملاً,
الرجاء تسجيل المنتج على موقع

www.samsung.com/global/register

SAMSUNG

WA15PALEP-02558E_AR.indd 1 2/26/2008 11:54:43 AM

ميزات الغسالة الجديدة

١. نظام الغسيل الفضي

عملية التجميع الناجحة! تعمل تقنية الغسيل الفضي من Samsung على دمج أثر التعقيم الناتج عن الغسيل الفضي باستخدام العلوم المتقدمة للحصول على أقصى درجة من الغسيل النظيف! يتم تحويل طبقين من الفضة النقية بنسبة ٩٩,٩٪ إلى أيونات فضية عن طريق التحليل بالكهرباء. تقوم الجزيئات الفضية بإزالة ٩٩,٩٪ من الرائحة التي تسبب البكتريا التي تحدث أثناء عملية الغسيل "نظافة قصوى" حتى وإن كانت في ماء بارد أو ماء بلا مادة تبييض اللون. لذا يؤدي الغسيل في ماء بارد إلى تحسين الطاقة كما أنه مفيد للملابس.

٢. نظام التجفيف بالهواء النفاث

تعمل تقنية الهواء النفاث على الدوران بقوة وسرعة بحيث تتيح لك تقليل الوقت اللازم للتجفيف.

توفير الوقت حيث يساعد الهواء النفاث على توفير الوقت وضمان تجفيف الملابس بنسبة ٣٠٪ إلى ٤٠٪ أسرع من التجفيف العادي. وحتى في المواسم الممطرة وفي الأجواء الرطبة، فإن الملابس التي تحتاج إلى وقت طويل كي تجف مثل الجينز السميك والمعاطف الكبيرة والبطانيات السميكة يتم تجفيفها بسرعة أكثر.

يعتبر الهواء النفاث مثالياً للملابس الرقيقة والملابس المصنوعة من الألياف الصناعية.

لا مزيد من تعليق الملابس وانتظارها حتى تجف. يمكنك كي الملابس بمجرد خروجها من الغسالة حيث أن "الهواء النفاث" يقضي على نسبة كبيرة من الرطوبة مما يسهل عملية كيها.

٣. حاوية من الماس

تحدث الحاوية المصنوعة من الماس ضغط عالي من الماء مما يعمل على إزالة الأوساخ من الغسيل بشكل فعال. تقلل الحاوية المصنوعة من الماس من إلحاق ضرر بالأقمشة مما يعمل على زيادة عمر الأقمشة. تتميز الأنبوبة الداخلية البراقة بأنها رائعة وقوية في امتصاص أثر الغسيل الذي تحدثه.

٤. باب شفاف مقوى

يتيح لك رؤية ما يحدث أثناء تشغيل الغسالة. يمكنك التحقق من تقدم عملية الغسيل في أي وقت.

٥. تحكم رقمي

تعمل ميزة التحكم الرقمي على تحديد أقصى دورة غسيل من خلال تقدير وزن الغسيل تلقائياً باستخدام الذكاء الاصطناعي.

٦. المصفاة الفعالة

تضمن لك المصفاة الفعالة الفريدة تجميع كافة النسالات الموجودة داخل حوض الغسيل مما يرفع كفاءة عملية التصفية للحصول على نتائج مناسبة وفعالة لعملية الغسيل.

٧. إعادة التشغيل التلقائي

يتم تشغيل زر "الطاقة" تلقائياً بعد انقطاع التيارالكهربي ومواصلة الدورة السابقة بسهولة. يعمل هذا على توفير الوقت ويضمن لك استكمال الغسيل في كل وقت دون حدوث خلل.

٨. وظيفة التأمين ضد عبث الأطفال

تعمل وظيفة التأمين ضد عبث الأطفال على حمايتهم من التعرض للأذى دون قصد أثناء اللعب بالغسالة.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب، والاستخدام، وصيانة الغسالة الجديدة من Samsung. يمكنك الرجوع إليها للحصول على أوصاف لوحة التحكم، والتعليمات التي تتعلق بكيفية استخدام الغسالة، والتلميحات التي تتعلق باستغلال أحدث الميزات والوظائف الموجودة بها. يرشدك قسم "استكشاف المعلومات وإصلاحها ورموز المعلومات" الموجود في صفحة ٢٦ إلى ما يجب عليك فعله في حالة حدوث شيء ما خطأ بالغسالة الجديدة.

WA15PALEP-02558E_AR.indd 2 2/26/2008 11:54:43 AM

معلومات متعلقة بالسلامة

ستلاحظ وجود علامات تحذيرية ⚠ وتنبيهية ⚠ في هذا الدليل. لا تغطي هذه التحذيرات والتنبيهات وإرشادات الأمان الهامة كافة الظروف والمواقف المحتمل وقوعها. لذا تقع على عاتقك مسؤولية التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها. لا تعد شركة Samsung مسؤولة عن الأضرار الناجمة عن سوء الاستخدام.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات في هذا الدليل إلى ما يلي:

تحذير	مخاطر أو إجراءات غير آمنة **قد تؤدي إلى إصابات جسيمة أو الوفاة**.
تنبيه	مخاطر أو إجراءات غير آمنة **قد تؤدي إلى إصابات طفيفة للأفراد أو تلف للممتلكات**.
تنبيه	لتقليل خطر حدوث حريق أو انفجار أو صدمة كهربائية أو إصابة للأفراد عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	لا تحاول.
	لا تقم بفك.
	لا تلمس.
	اتبع الإرشادات المحددة بوضوح.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من أن الغسالة مثبته على الأرض لمنع حدوث صدمة كهربائية.
	يمكنك الاتصال بمركز الصيانة للحصول على المساعدة.

تهدف علامات التحذير الموجودة هنا إلى منع حدوث إصابات لك وللآخرين.
الرجاء اتباع هذه الإرشادات كما ينبغي.
قم بحفظ هذا القسم في مكان آمن بعد قراءته للاحتفاظ به كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

حيث يحتمل حدوث مخاطر مع أي جهاز عند استخدام الكهرباء والأجزاء المتنقلة. لتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر عند استخدامه.

قم بتركيب الغسالة ووضعها بالداخل، بعيداً عن التعرض لعوامل الطقس.

قم بتركيب الغسالة واجعلها مستوية على أرضية يمكن أن تناسب وزنها.

يجب تثبيت الغسالة على الأرض بشكل صحيح. لا تقم بتوصيلها بأحد المآخذ غير الأرضية.

ضع الغسالة حتى يتسنى الوصول إلى مقبس الحائط بعد استكمال عملية التركيب.

WA15PALEP-02558E_AR.indd 3 2/26/2008 11:54:43 AM

معلومات متعلقة بالسلامة

تنبيه

لتقليل مخاطر حدوث حريق أو انفجار:

- لا تقم بغسل الملابس التي قمت بغسلها أو غمسها أو التعامل معها باستخدام الجازولين أو مذيبات التنظيف الجاف، أو المواد الأخرى القابلة للاشتعال والانفجار، لأنها تحدث أبخرة يمكن أن تشتعل أو تنفجر. قم بشطف أية مواد يدوياً قد تعرضت لمذيب تنظيف أو أية سوائل أو مواد صلبة أخرى قابلة للاشتعال قبل وضعها في الغسالة. تأكد من التخلص من كافة آثار تلك المواد السائلة والصلبة والأبخرة. المواد الخطرة التي تشتمل على الأسيتون، والمواد الكحولية، والجازولين، والكيروسين، وبعض المنظفات المنزلية، ومزيلات البقع، والزيوت التربنتينة، والشمع، ومزيلات الشمع.
- لا تقم بوضع الجازولين، أو مذيبات التنظيف الجاف، أو أية مواد أخرى قابلة للاشتعال أو الانفجار في الغسالة.
- قد يصدر غاز الهيدروجين في نظام الماء الساخن في ظروف معينة، كما هو الحال بالنسبة لسخان الماء الساخن الخاص بك، الذي لم يستخدم لمدة أسبوعين أو أكثر. غاز الهيدروجين قابل للانفجار. في حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بتشغيل كافة صنابير المياه الساخنة الموجودة في المنزل، ودع الماء يتدفق لبضعة ثوان قبل استخدام الغسالة. سوف يعمل ذلك على تقليل نسبة تزايد غاز الهيدروجين. لا تقم بإشعال أي مصدر لهب مفتوح في ذلك الوقت.

قم بتهوية القابس على الفور دون لمسه في حالة تسرب الغاز.

قم بفصل سلك الطاقة قبل صيانة الغسالة.

لا تقم بالاقتراب من الغسالة أثناء تحرك الحاوية.

لا تحاول لمس أسفل الجهاز بيديك أو باستخدام أداة حيث أن لوحة التنشيف الموجودة أسفل الغسالة قد تلحق بك ضرراً.

تنبيه

لا تدع الأطفال يقومون باللعب على الغسالة أو بداخلها. لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بضرر شديد في حالة احتباسهم داخلها.

تنبيه

لا تدع الأطفال يقومون بالنظر داخل الغسالة حيث أن سقوطهم فيها يشكل خطراً كبيرًا وقد يؤدي إلى عواقب وخيمة.

تنبيه

هذا الجهاز غير مخصص لاستخدام الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكلٍ آمن. يجب مراقبة الأطفال الصغار لضمان عدم عبثهم بالغسالة.

لا تقم بإصلاح أي جزء من الغسالة أو استبداله أو صيانته بنفسك مالم تكن على دراية كامة بإرشادات الإصلاح الموصى بها بالنسبة للمستخدم وتتوافر لديك مهارات كيفية تنفيذها. قد تؤدي عملية الإصلاح من قبل شخص غير معتمد إلى إلغاء الضمان.

قم بتخزين منظفات الغسيل والمستلزمات الأخرى للغسيل في مكان بارد وجاف بعيداً عن متناول أيدي الأطفال.

قم بفصل الخراطيم وغلق المياه عند عدم استخدام الغسالة.

في حالة تلف سلك التيار الكهربي، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض لأي خطر.

لا تقم بثني كبل التيار الكهربي بقوة أو وضع أية أشياء ثقيلة عليه.

لا تقم بلمس سلك التيار الكهربي ويديك مبتلة.

لا تبالغ في تحميل منفذ التيار الكهربي بعدد كبير من الأجهزة

WA15PALEP-02558E_AR.indd 4 2/26/2008 11:54:44 AM

لا تقم بتركيب الغسالة بالقرب من المعدات الكهربائية كما لا تقم بوضع أية شموع أو سجائر على الغسالة.

لا تقم بالاقتراب من الغسالة في حالة فيضان الماء أو جريانه حيث يحتمل وقوع صدمة كهربية. قم بفصل الغسالة وتصريف الماء تماماً.

تنبيه

لا تقم بجمع مادة التبييض من الكلور، أو الأمونيا، أو الأحماض (مثل الخل أو مزيل الصدأ) الموجود في نفس الغسيل. تتسم المواد القابلة للاشتعال التي يمكن أن تتكون من جراء جمع هذه المواد بأنها خطرة.

لا تقم بغسل المواد المصنوعة من الفيبرجلاس. يمكن أن تلتصق الجزيئات الصغيرة بالأقمشة في الأحمال التالية وتسبب التهابات جلدية.

تحذير

قبل التخلص من الغسالة، قم بإزالة الباب حتى لا يحتبس الأطفال أو الحيوانات الصغيرة داخل الغسالة.

قم بتوصيل الغسالة بمصدر المياه الرئيسي باستخدام مجموعة جديدة من الخراطيم. يحظر إعادة استخدام مجموعة خراطيم قديمة.

تتأثر خراطيم صنبور المياه بمرور الوقت. قم بفحص الخراطيم بشكل دوري لمعرفة الانتفاخات، والالتواءات، ومناطق القطع، والبلي، والتسرب، واستبدالها حسبما تقتضي الحاجة كل خمس سنوات على الأقل.

قم بتفريغ جيوب الملابس قبل كل غسيل. يمكن أن تتسبب الأشياء الصغيرة، والصلبة المشكلة بطريقة غير عادية مثل العملات المعدنية، والسكاكين، والدبابيس، وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبير الحجم أو أشياء معدنية أخرى ثقيلة الوزن.

في حالة عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد قيامك بفتح الغطاء، اتصل بوكيل الصيانة على الفور.

قم بتوصيل السلك الأرضي باللوحة الأساسية وتخبئته تحت عمق ١٠ بوصة (٢٥ سم) تقريباً تحت الأرض: أو يمكنك كبديل لذلك توصيل سلك الأرضي بمقبس طاقة لتصريف أرضي. يحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب غاز.

الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

WA15PALEP-02558E_AR.indd 5 2/26/2008 11:54:44 AM

المحتويات

إعداد الغسالة ٧

٧ تأكد من أجزاء الغسالة ولوحة التحكم
٩ الدورة "رقمي"
٩ دورة "البطانية"
١٠ دورة "الملابس الرقيقة"
١٠ دورة الذاكرة
١٠ دورة "تنظيف الحوض"
١١ الدورة "سريع"
١١ "نظافة قصوى"
١١ دورة "اقتصادي+"
١١ تأجيل التشغيل
١٢ غسيل فضي
١٢ هواء نفاث
١٣ وظائف يدوية
١٤ تركيب الغسالة
١٤ اختيار مكان الغسالة
١٤ توصيل خرطوم توريد الماء
١٥ تجميع لوحة الحماية (اختياري)
١٥ توصيل خرطوم التصريف
١٧ ضبط ارتفاع الغسالة

غسيل كمية من الملابس ١٨

١٨ إرشادات أساسية
١٨ تعليمات الغسيل
٢٠ مسحوق الغسيل ومعلومات حول المواد الإضافية
٢١ الغسيل للمرة الأولى
٢١ وظيفة التحسس التلقائي

تنظيف الغسالة وصيانتها ٢٢

٢٢ احتفظ بالحوض نظيفًا
٢٢ تنظيف مصفاة موصل تزويد الماء
٢٣ تنظيف شبكة المصفاة
٢٣ تنظيف مصفاة المضخة

استكشاف المشاكل وحلها ورموز المعلومات ٢٤

٢٤ تحقق مما يلي إذا كانت الغسالة...
٢٦ رموز المعلومات

المواصفات ٢٧

WA15PALEP-02558E_AR.indd 6 2/26/2008 11:54:44 AM

إعداد الغسالة

تأكد من التركيب وفقًا لهذه الإرشادات بشكل دقيق حتى تعمل الغسالة بشكل صحيح وتجنب مخاطر حدوث إصابة عند القيام بالغسيل.

تأكد من أجزاء الغسالة ولوحة التحكم

أخرج الغسالة بعناية من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو في حالة عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

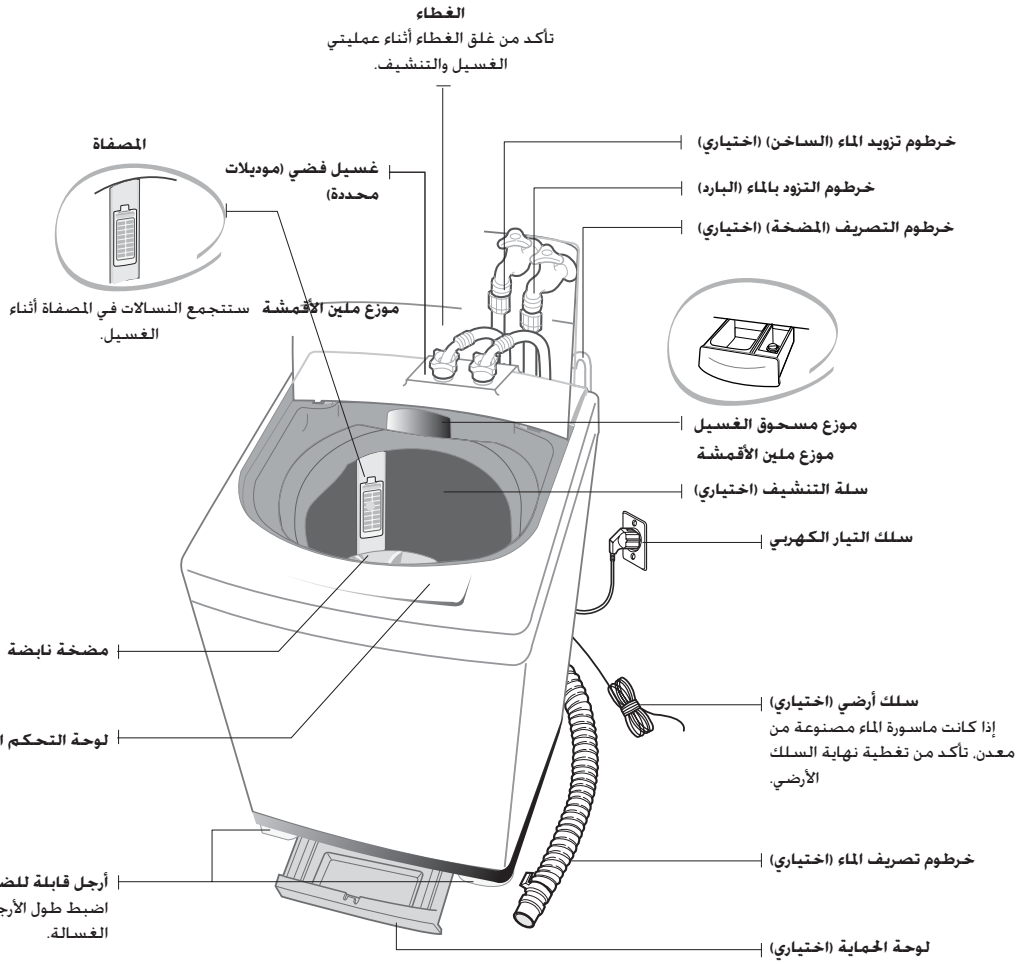
الغطاء
تأكد من غلق الغطاء أثناء عمليتي الغسيل والتنشيف.
خرطوم تزويد الماء (الساخن) (اختياري)
خرطوم التزود بالماء (البارد)
خرطوم التصريف (المضخة) (اختياري)
المصفاة
غسيل فضي (موديلات محددة)
ستتجمع النسالات في المصفاة أثناء الغسيل.
موزع ملين الأقمشة
موزع مسحوق الغسيل
موزع ملين الأقمشة
سلة التنشيف (اختياري)
سلك التيار الكهربي
مضخة نابضة
لوحة التحكم الأمامية
سلك أرضي (اختياري)
إذا كانت ماسورة الماء مصنوعة من معدن، تأكد من تغطية نهاية السلك الأرضي.
خرطوم تصريف الماء (اختياري)
أرجل قابلة للضبط
اضبط طول الأرجل عند تثبيت الغسالة.
لوحة الحماية (اختياري)

WA15PALEP-02558E_AR.indd 7 2/26/2008 11:54:44 AM

إعداد الغسالة

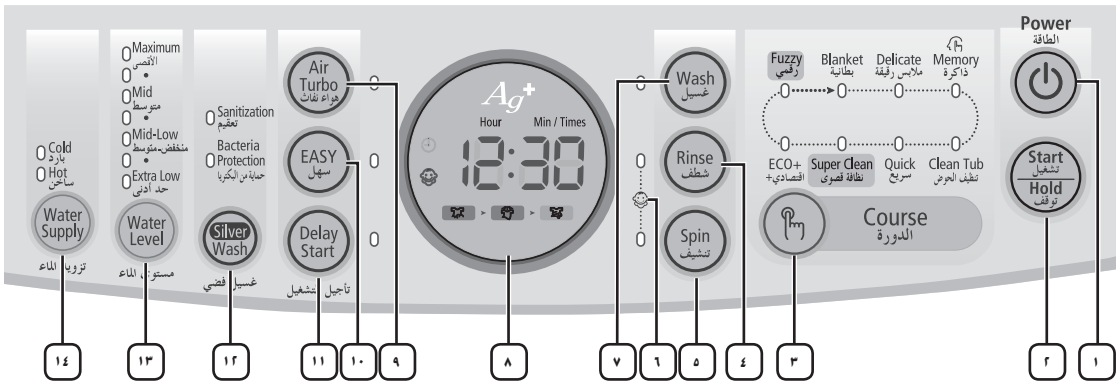

١ **الزر "الطاقة"**	قم بالضغط على هذا الزر مرة واحدة لبدء التشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.
٢ **الزر "تشغيل/إيقاف مؤقت"**	اضغط لإيقاف الدورات مؤقتاً وإعادة تشغيلها. لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل، اضغط هذا الزر للإيقاف، ومرة أخرى لإعادة تشغيل الغسالة بعد تغيير إجراء الغسيل.
٣ **زر تحديد الدورة**	اضغط على هذا الزر مراراً وتكراراً لتدويرها خلال دورات الغسيل: [رقمي ← بطانية ← ملابس رقيقة ← ذاكرة ← تنظيف الحوض ← سريع ← نظافة قصوى ← اقتصادي+]
٤ **الزر "شطف"**	اضغط على هذا الزر لأداء دورة الشطف فقط أو لضبط حجم دورات الشطف.
٥ **الزر "تنشيف"**	اضغط على هذا الزر لإجراء عملية التنشيف فقط أو لضبط وقت التنشيف. عند تحديد دورة التنشيف فقط، سيختلف وقت التنشيف عن الوقت الكلي المتبقي. ويرجع ذلك إلى أن الوقت الكلي المتبقي يتضمن وقت التنشيف الفعلي ووقت تصريف الماء وإيقاف الغسالة.
٦ **وظيفة التأمين ضد عبث الأطفال**	تمكنك وظيفة التأمين ضد عبث الأطفال من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي تم تحديدها. (يعمل هذا الجهاز على منع الأطفال من اللعب بالغسالة.) **التشغيل/عدم التشغيل:** قم بالضغط على كل من زر **الشطف** و **التنشيف** في نفس الوقت لمدة ٣ ثوان. (ملاحظة: لا يمكن أداء هذه الوظيفة دون تشغيل "**الطاقة**".)
٧ **الزر "غسيل"**	اضغط على هذا الزر للقيام بدورة الغسيل فقط أو لضبط وقت الغسيل.
٨ **الوقت المتبقي ووقت تأجيل التشغيل وشاشة الأخطاء**	تقوم الشاشة بعرض وقت الغسيل المتبقي، ووقت تأجيل التشغيل المحفوظ ورسائل الأخطاء.
٩ **الزر "هواء نفاث"**	اضغط على هذا الزر للحصول على تجفيف سريع للغسيل. اضغط على هذا الزر للتبديل بين خيارات "الهواء النفاث": تشغيل ← إيقاف ← تشغيل يمكن تحديد هذه الوظيفة فقط في حالة ضبط دورة التنشيف.
١٠ **الزر "سهل"**	إذا قمت باختيار دورة "سهل"، ستتمتع باستخدام جميع الوظائف السهلة المزودة بها غسالة سامسونج بلمسة واحدة من أصابعك. عند تحديد هذه الدورة، يتم تحديد دورة "هواء نفاث" و"غسيل فضي" تلقائيًا.
١١ **الزر "تأجيل التشغيل"**	اضغط على هذا الزر لإنهاء الغسيل في وقت محدد. قم بإيقاف تشغيل الغسالة لإلغاء وقت التشغيل المؤجل مسبقاً. يمكنك ضبط وقت التشغيل المؤجل بين ٣ إلى ١٨ ساعة.

WA15PALEP-02558E_AR.indd 8 2/26/2008 11:54:45 AM

١٢ الزر "غسيل فضي"	يتم في هذه دروة توفير الماء الفضي أثناء دورة الغسيل وأيضاً أثناء عملية الشطف الأخيرة. مما يوفر تعقيماً إضافياً وحماية من البكتريا. لا يمكن تحديد ماء الغسيل الفضي في حالة تحديد الماء الساخن فقط. **التعقيم:** يتم إضافة ماء الغسيل الفضي إلى تزويد الماء للقيام بغسل معقم ومكافحة للبكتريا. **الحماية من البكتريا:** يتم توريد ماء الغسيل الفضي أثناء دورة الشطف الأخيرة بعد عملية الغسيل لوضع طبقة مكافحة للبكتريا على الغسيل. تعمل وظيفة الشطف المعقم على منع انتشارالبكتريا. يكون ذلك متاحاً لكافة الدورات فيما عدا دورة الملابس الرقيقة.
١٣ الزر "مستوى الماء"	يتم ضبط مستوى الماء تلقائيًا. مع ذلك، يمكنك تحديد مستوى الماء يدويًا بالضغط على هذا الزر بشكل متكرر.
١٤ الزر "تزويد الماء" (اختياري)	اضغط على هذا الزر بشكل متكرر لأداء الدورة من خلال خيارات الغسيل: بارد ← ساخن ← بارد لتغيير خيارات الماء، قم بإيقاف تشغيل وظيفة الماء الفضي.

الدورة "رقمي"

يمكنك استخدام هذه الدورة لتحديد أفضل دورة غسيل تلقائياً.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم تحديد مستوى الماء تلقائيًا.
٣. تأتي بعد ذلك دورات الغسيل والشطف والتنشيف.
٤. لإيقاف إحدى الدورات، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٥. أغلق الغطاء.

دورة "البطانية"

استخدم هذه الدورة لغسيل الأشياء كبيرة الحجم مثل البطاطين وملاءات السرير.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على زر تحديد **الدورة**.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم تحديد مستوى الماء تلقائيًا.
٤. فيما يلي دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف أحد الدورات مؤقتًا، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٦. أغلق الغطاء.

- لا تغسل البطانية الكهربائية والسجاد.
- قم بطي الغسيل ذا الحجم الكبير (البطاطين وملاءات السرير) بالطريقة التالية قبل وضعه بداخل سلة التنشيف.
- قم بشراء شبكة للغسيل الخفيف وكبير الحجم (مثل الملابس الصوفية والبطاطين) لأنها قد ترتفع إلى أعلى الغسالة مما قد يتسبب في الضرر.

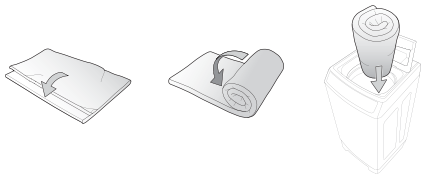

WA15PALEP-02558E_AR.indd 9 2/26/2008 11:54:45 AM

إعداد الغسالة

دورة "الملابس الرقيقة"

يمكنك استخدام هذه الدورة لغسيل الملابس الرقيقة مثل الجواكت القابلة للغسيل، والسترات الصوفية، والملابس الأخرى الرقيقة.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.

٢. اضغط على زر تحديد **الدورة**.

٣. اضغط على الزر **تشغيل/إيقاف مؤقت** يتم تحديد مستوى الماء تلقائياً عند المستوى المتوسط بين منخفض-متوسط وحد أدنى. كما يمكنك ضبط مستوى الماء يدوياً.

٤. فيما يلي دورات الغسيل، والشطف، والتنشيف.

٥. لإيقاف أحد الدورات مؤقتًا، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٦. أغلق الغطاء.

- يمكنك تحديد ماء بارد فقط.
- تتميز دورة التنشيف الأخيرة بأنها دورة خفيفة لمنع التجاعيد.
- يمكنك استخدم مسحوق الغسيل الموضح في الغسيل فقط.
- يمكنك الرجوع إلى علامة العناية الموجودة على الملابس للحصول على المعلومات الصحيحة لعملية الغسيل.
- تأكد من أن الأزرار مثبته وأن الغسيل يتم قلبه على ظهره داخل الغسالة.
- بالنسبة لدورة الملابس الرقيقة، لا يمكن تحديد وظائف "هواء نفاث" و"غسيل فضي" لأن ذلك ربما يلحق ضرراً بالملابس الرقيقة.

دورة الذاكرة

يمكنك استخدام هذه الدورة لإنشاء الدورات المفضلة أو المستخدمة بكثرة وتخزينها في الغسالة حتى يمكنك تحديدها في أي وقت.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.

٢. اضغط على زر تحديد **الدورة**.

٣. يمكنك تحديد الوظائف المستخدمة بشكل بكثرة.
تحديد الغسيل، أو الشطف أو التنشيف أو الغسيل الفضي وفقاً لمتطلباتك.

٤. اضغط على الزر **تشغيل/إيقاف مؤقت** لتخزينها.

يمكن تخزينها فقط عند تحديد خطوات الغسيل+الشطف+التنشيف.

٥. قم بإضافة مسحوق وملين طبقاً لمستوى الماء وأغلق الغطاء.

- إذا قمت بتحديد الدورة «ذاكرة» بعد تشغيل الغسالة، يتم استرداد الإعدادات المخزنة تلقائيًا.
- لتغيير الإعدادات المخزنة، حدد الدورة «ذاكرة» وقم بإعادة ضبط الإعدادات ثم اضغط على الزر "**تشغيل/إيقاف مؤقت**". يتم حفظ التغييرات.

دورة "تنظيف الحوض"

استخدم هذه الدورة لتنظيف الحوض. فهي تؤدي إلى إبقاء الحوض نظيفًا ومعقمًا.

١. اضغط على الزر **الطاقة** "للتشغيل".

٢. اضغط على زر تحديد **الدورة**.

٣. اضغط على الزر "**تشغيل/إيقاف**".

٤. أضف المسحوق ثم أغلق الغطاء.

- لا تقم أبدًا بوضع الغسيل في الحوض عند القيام بتنظيفه. فقد يؤدي ذلك إلى تلطخ ألوان الغسيل أو تلفه.
- عند القيام بالغسيل بعد تنظيف الحوض، قد تجد بعض الرواسب. التي ترجع إلى بقايا المادة المنظفة الناتجة عن عملية التنظيف. قم بإجراء دورة الشطف من مرتين إلى ثلاث مرات.
- سيتم ضبط وظيفة "تنقيع" تلقائيًا.
- يتم تحديد مستوى الماء الأولي عند المستوى المتوسط بين الأقصى والمتوسط.

WA15PALEP-02558E_AR.indd 10 2/26/2008 11:54:45 AM

الدورة "سريع"

تعد دورة "سريع" مناسبة للغسيل الخفيف أو الغسيل المتسخ اتساخاً خفيفاً.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على زر تحديد **الدورة**.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم تحديد مستوى الماء تلقائيًا.
٤. فيما يلي دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف أحد الدورات مؤقتًا، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٦. أغلق الغطاء.

"نظافة قصوى"

استخدم هذه الدورة لتحقيق غسيل على أعلى درجة من النظافة.

توفر هذه الدورة أعلى درجة في أداء الغسيل من خلال نظام النظافة القصوي المكون من ٥ خطوات.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على زر تحديد **الدورة**.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم تحديد مستوى الماء عند المستوى المتوسط بين متوسط ومنخفض-متوسط.

يتم تحديد مستوى الماء بين الأقصى والمتوسط أو عند المستوى المتوسط بين متوسط ومنخفض-متوسط.

٤. أغلق الغطاء.

دورة "اقتصادي+"

تستخدم هذه الدورة عندما تريد غسل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الاتساخ. بما أن الغسيل يكون سريعاً. يفضل استخدام هذه الدورة للغسيل المتسخ اتساخاً خفيفاً أو أقل.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على زر تحديد **الدورة**.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت**.
٤. فيما يلي دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف أحد الدورات مؤقتًا، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٦. أغلق الغطاء.

تأجيل التشغيل

يمكنك استخدم هذه الدورة لتحديد وقت لبدء دورة الغسيل، عندما تكون بحاجة للخروج ولا يمكنك مراقبة الغسالة على سبيل المثال.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على الزر **تأجيل التشغيل** مرة واحدة
لربما تقوم بضبط وقت التأجيل باستخدام الزر **تأجيل التشغيل** في فترة من ٣ إلى ١٨ ساعة.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت** ثم أضف كمية مناسبة من المسحوق في درج المسحوق.
٤. أغلق الغطاء.
سوف ينتهي الغسيل بانتهاء الوقت المحدد.
قم بإضافة مسحوق وملين طبقاً لمستوى الماء وأغلق الغطاء.

- يجب إضافة المسحوق في درج المسحوق.
- في حالة إضافة المسحوق إلى الغسيل مباشرة، قد تفقد بعض الملابس لونها بسبب تأجيل التشغيل.
- لإلغاء تأجيل التشغيل، اضغط على **الطاقة**.

WA15PALEP-02558E_AR.indd 11 2/26/2008 11:54:45 AM

إعداد الغسالة

غسيل فضي

تعمل هذه الدورة على قتل البكتريا الموجودة في الغسيل أثناء دورة الغسيل أو الشطف مما يعمل على حمايتك أنت وأسرتك من البكتريا الضارة.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على الزر **غسيل فضي**.
٣. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم تحديد مستوى الماء تلقائيًا.
٤. فيما يلي دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف أحد الدورات مؤقتًا، اضغط على الزر **تشغيل/إيقاف مؤقت** مرة أخرى. يمكنك تغيير الدورة أثناء الإيقاف المؤقت.
٦. أغلق الغطاء.

يمكن اختيار ذلك فقط في حالة تحديد دورات الغسيل والشطف والتنشيف.

- عند تحديد دورة "غسيل فضي"، وإيقاف تشغيل الزر "**تزويد الماء**" الذي يتم تحديده يدوياً.
- يكون ذلك متاحاً كخيار لكافة الدورات فيما عدا دورة الملابس الرقيقة.

هواء نفاث

تعمل هذه الدورة على توفير الوقت، مما يضمن لك تجفيف ملابسك بشكل أسرع من التجفيف على حبل الغسيل.

١. اضغط على الزر **الطاقة** "لتشغيل" الغسالة.
٢. اضغط على **الزر** "هواء نفاث".

يتم أداء العمليات بالترتيب التالي في كل وقت يتم فيه الضغط على الزر "هواء نفاث": تشغيل ← إيقاف التشغيل ← تشغيل

٣. أغلق الغطاء.
٤. اضغط على الزر **تشغيل/إيقاف مؤقت**.

- يمكن تحديد ذلك كخيار إضافي لكافة الدورات فيما عدا دورة "الملابس الرقيقة" ودورة "تنظيف الحوض".
- تكون وظيفة "هواء نفاث" متوفرة فقط عند تحديد دورة "التنشيف".
- حدد هذه الوظيفة إذا أردت تجفيف الغسيل في مرحلته المتوسطة.

WA15PALEP-02558E_AR.indd 12 2/26/2008 11:54:46 AM

وظائف يدوية

من الممكن تحديد الدورات يدوياً.

(مثال) غسيل أساسي للملابس خفيفة الاتساخ:

الطاقة ← تحديد الدورة "سريع" ← غسيل ← تشغيل/إيقاف مؤقت

الدورة	إرشادات
الغسيل فقط 	اضغط على الزر **الطاقة**. اضغط على الزر **غسيل**. اضغط على الزر **تشغيل/إيقاف مؤقت**. عند الضغط على الزر "**غسيل**" أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٦ دقائق و ٣٠ دقيقة.
الشطف فقط 	اضغط على الزر **شطف**. اضغط على الزر **تشغيل/إيقاف مؤقت**. يتم أداء دورة الشطف مرتين. عند الضغط على الزر **شطف** أثناء الشطف، يمكن تغيير عدد مرات الشطف لتتراوح من مرة واحدة إلى خمس مرات.
التنشيف فقط 	اضغط على الزر "**تنشيف**". اضغط على الزر **تشغيل/إيقاف مؤقت**. عند الضغط على الزر "**تنشيف**" أثناء دورة التنشيف، يمكن تغيير مدة التنشيف من دقيقة إلى ٩ دقائق.
الغسيل والشطف 	اضغط على الزر **غسيل وشطف**. اضغط على الزر **تشغيل/إيقاف مؤقت** مرة واحدة. تتعرف الدورة على كمية الغسيل، وتحديد وقت الغسيل والشطف تلقائياً. عند الضغط على الزر **غسيل وشطف** أثناء تشغيل الغسالة، يتم تحديد وقت الغسيل إلى ما بين ٦ و ٣٠ دقائق، وتحديد وقت الشطف إلى ما بين مرة واحدة أو خمس مرات.
الشطف والتنشيف 	اضغط على الزر **شطف وتنشيف**. اضغط على الزر **تشغيل/إيقاف مؤقت** مرة واحدة. يتم تشغيل دورات الشطف والتنشيف. عند الضغط على الزر **شطف وتنشيف** أثناء تشغيل الغسالة، يتم تحديد عدد دورات الشطف ما بين مرتين أو خمس مرات، كما يتم تحيد وقت التنشيف ما بين دقيقة واحدة وتسع دقائق.
غسيل وشطف وتنشيف 	اضغط على الزر **غسيل وشطف وتنشيف**. اضغط على الزر **تشغيل/إيقاف مؤقت** مرة واحدة. يتم تشغيل دورات "غسيل" و"شطف" و"تنشيف"

WA15PALEP-02558E_AR.indd 13 2/26/2008 11:54:47 AM

إعداد الغسالة

تركيب الغسالة

اختيار مكان الغسالة

تأكد من اختيار مكان الغسالة قبل تركيبها.

- لا بد من توافر سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية وتجنب الاهتزازات
- اترك مسافة تقدر بـ ٤ بوصة (١٠ سم) بين الغسالة والحائط
- تكون بعيدة عن ضوء الشمس المباشر وغير معرضة للمطر حيث أن الرطوبة قد تؤدي إلى تلف العزل الكهربي مما يتسبب في حدوث صدمة كهربية
- يجب أن يتوافر بها تهوية كافية
- لا تكون معرضة لدرجات حرارة تحت الصفر (أقل من ٣٢°ف فهرنايت و٠ درجة مئوية
- تكون بعيدة عن مصادر الحرارة مثل البترول والغاز
- لا بد من توفر مساحة كافية حتى لا يتم وضع الغسالة على كبل الطاقة

توصيل خرطوم توريد الماء

توصيل الخرطوم بالصنبور

١. إزالة المحول من خرطوم تزويد الماء.



٢. إرخاء البراغي الأربعة الموجودة بالمحول باستخدام مفك البراغي من نوع "+". ثم إخراج المحول ولف الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٢,٠ بوصة (٥ مم) بين الجزء (أ) والجزء (ب).

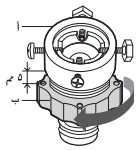

٣. قم بتوصيل المحول بصنبور الماء بربط البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وادفع الجزءين (أ) و (ب) معاً.

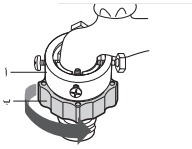

٤. صل خرطوم تزويد الماء بالمحول. قم بسحب الجزء (ج) (خرطوم تزويد الماء) لأسفل. عند إرخاء الجزء (ج). يتم توصيل الخرطوم بالمحول تلقائياً محدثاً صوت "إغلاق".



٥. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.

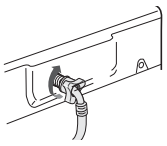

أو

صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

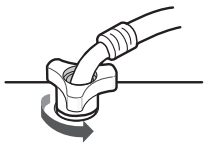

WA15PALEP-02558E_AR.indd 14 2/26/2008 11:54:48 AM

إذا كان صنبور الماء من نوع برغي، ركب خرطوم توريد للماء يلائم الصنبور كما هو موضح. بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.

بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات. استخدم صنبور من النوع العادي للتزويد بالماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور إلى المحوّل.

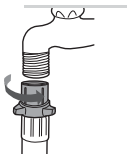

تجميع لوحة الحماية (اختياري)

١. قم بدفع لوحة الحماية وإدراجها نحو الخلف من خلال فتحة الإدخال من الأمام.

٢. إذا واجهتك صعوبات في إدخال اللوحة، ارفع الغسالة قليلاً ثم قم بإدخالها.

لا يتم استخدام لوحة الحماية في بعض الموديلات

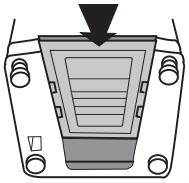

توصيل خرطوم التصريف

بالنسبة للغسلات غير المزودة بمضخات تصريف

١. قم بالضغط على حلقة الوصل وضعها حول خرطوم التصريف.

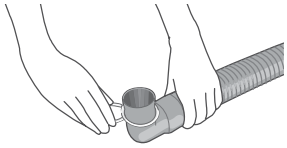

٢. بعد وضع خرطوم التصريف في مخرج التصريف، قم بوصل الطرف الأخر للخرطوم بمخرج الصرف الخاص بالغسالة.

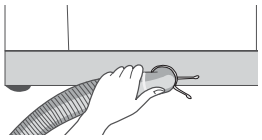



٣. تأكد من توصيله بإحكام عن طريق الضغط على حلقة الوصل ودفعها في مخرج التصريف.

- يمكن التحكم في ضبط طول خرطوم التصريف بحيث يمكنك إطالته ليصل إلى الطول الملائم.



تغيير اتجاه خرطوم التصريف

- اضغط على مقبض حلقة الوصل لدفع خرطوم تصريف الماء. قم بتغيير اتجاه خرطوم التصريف واتبع الإرشادات الموضحة أعلاه مرة أخرى.



WA15PALEP-02558E_AR.indd 15 2/26/2008 11:54:49 AM

إعداد الغسالة

تنبيه

تنبيه حول إدخال خرطوم تصريف الماء

١. عند توصيل خرطوم بآخر، ينبغي ألا يزيد الطول عن ١١٨,١ بوصة (٣م).

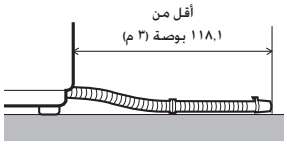

٢. تأكد أن طرف خرطوم التصريف منخفض عن مستوى الماء لصمان تصريف الماء بصورة ملائمة.

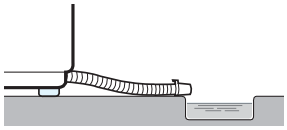

٣. يجب ألا تكون هناك أية عوائق في طريق خرطوم التصريف أعلى من ٢ بوصة (٥ سم).

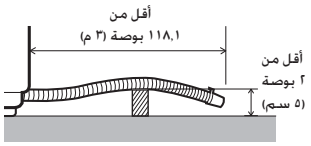

٤. لا تقم بتثبيت خرطوم تصريف الماء أسفل الغسالة.

بالنسبة للغسلات المزودة بمضخات تصريف

١. انزع غطاء الخرطوم وصل خرطوم الصرف.

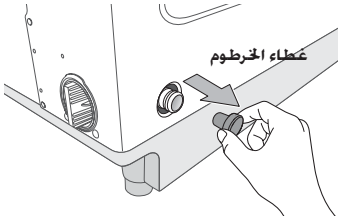

٢. تأكد من توصيل خرطوم التصريف بمخرج التصريف بشكل محكم الموجود على جانب الغسالة.

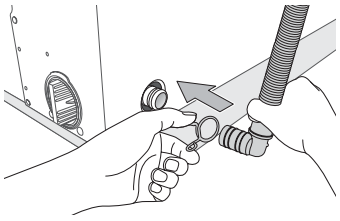

٣. ثبت خرطوم تصريف الماء على بعد يقدر بنحو (٩٠~١٠٠سم) فوق الأرض.

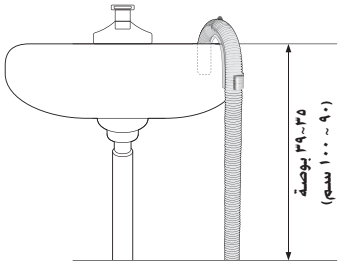

WA15PALEP-02558E_AR.indd 16 2/26/2008 11:54:50 AM

ضبط ارتفاع الغسالة

تأكد من استواء الغسالة عن طريق ضبط أرجل الاستواء.

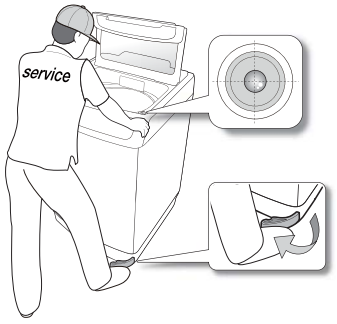

⚠ تنبيه كن حذراً من وضع يديك تحت أرجل الغسالة.

١. قم بسحب المقابض الموجودة على يمين ويسار الجزء الأمامي للغسالة وإزاحتها.
٢. قم بتعديل ارتفاع الغسالة لأعلى أو لأسفل.
٣. بعد الانتهاء من ضبط الارتفاع. قم بدفع المقابض للخلف لتثبيت أرجل الضبط في مكانها.

مؤشر مستوى الماء	السبب	كيفية ضبط الاستواء
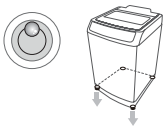	تكون مقدمة الغسالة منخفضة	حدد مستوى الغسالة عن طريق ضبط الأرجل.
	تكون خلفية الغسالة منخفضة	تعديل الارتفاع باستخدام الدعامات الموجودة في الخلف.
	يكون الجانب الأيسر من الغسالة منخفض	قم بتعديل الجانب الأيسر باستخدام الأرجل القابلة للتعديل الموجودة في المقدمة والدعامات الموجود في الخلف.
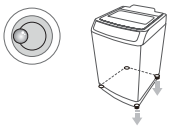	يكون الجانب الأيمن من الغسالة منخفض	قم بتعديل الجانب الأيسر باستخدام الأرجل القابلة للتعديل الموجودة في المقدمة والدعامات الموجود في الخلف.

ضبط استواء أرجل الغسالة باستخدام البراغي المخصصة للاستواء.(اختياري)

١. قم برفع الغسالة برفق ولف الأرجل القابلة للضبط إلى اليسار لضبطها على وضع الاتزان الأمثل.

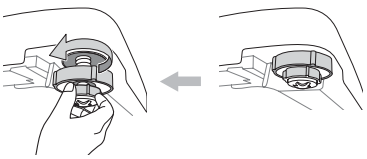

٢. عند الانتهاء. أنزل الغسالة إلى موضعها الأصلي.

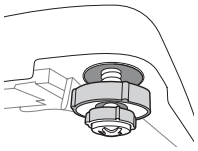

٣. بعد ضبط الأرجل. احرص على ربط صمولة التأمين لأغراض السلامة.
(قد يتسبب عدم القيام بذلك في عدم تثبيت الغسالة وتحريكها من مكانها.)

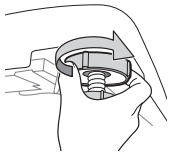

WA15PALEP-02558E_AR.indd 17 2/26/2008 11:54:52 AM

غسيل كمية من الملابس

مع الغسالة الجديدة، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.
٢. أغلق الباب.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة مسحوق ومواد إضافية في الموزع (راجع صفحة ٢٠).
حدد الدورة والخيارات المناسبة للكمية (راجع الصفحات من ٩ إلى ١٢). سيضيء مؤشر الغسيل وسوف يظهر وقت الدورة الذي تم تقديره على الشاشة.
٥. اضغط على الزر **تشغيل/إيقاف مؤقت**.

تعليمات الغسيل

اتبع هذه التعليمات البسيطة للحصول على غسيل أكثر نظافة وأكثر فاعلية. (من الضروري اتباع تعليمات الفحص الموجودة أدناه لتجنب المشاكل التي قد يواجهها جهاز الغسالة أو التلفيات التي قد تلحق بالملابس).
في حالة وجود أية مشاكل تحدث بسبب الاستخدام الخطأ من قبل العميل، سيتم تحصيل مصاريف خدمة منفصلة من العميل.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسيل.

- يمكنك ملء الحوض بملابس جافة وغير مثنية، ولكن يحظر وضع ملابس زيادة عن اللزوم في الحوض. قد يقلل وضع ملابس زيادة عن اللزوم من كفاءة الغسيل، ويسبب حدوث بلي للغسيل والغسالة، ويمكن أن يسبب ثني أو تجعيد لكمية الغسيل.
- عند القيام بغسل الأشياء كبيرة الحجم أوالضخمة أو الأشياء الأصغر في الحجم لا تقم بملء الحوض تماماً - بطانية، أو وسادة، أو دمي محشوة، أو جاكت واحد أو اثنين على سبيل المثال-.قم بإضافة مناشف قليلة لتحسين أداء التجفيف بالتدوير والتنشيف.
- تأكد من وجود أية ملابس قد تبيض. أضف مسحوق سائل إلى أحد المناشف والملابس ذات اللون الأبيض إذا كنت غير متأكد من أنها قد تبيض. قم بدعك كلا الثوبين معاً بقوة. تحقق مما إذا كان اللون قد انتقل إلى المنشفة أم لا.
- تعامل بحذر مع الوشاحات والملابس المستوردة حيث أنها تفقد لونها بسهولة. تحقق مما إذا كان يوجد أية بقع أو أوساخ بالملابس. في حالة وجود أية بقع، قم بإضافة بعض المساحيق إلى الملابس وادعكها في اتجاه واحد. يؤدي دعك الأوساخ والأتربة المتراكمة على الملابس الرقيقة إلى تعريضها للتلف والحصول على نتائج غير مرضية بعد الغسيل.
- إذا كانت الملابس متسخة بدرجة عالية، قم بإزالتها وغسلها بشكل منفصل،حيث أن الأوساخ قد تنتقل إلى الملابس الأخرى.
- قبل الغسيل، تتم معالجة الأشياء التالية مسبقاً مثل الأساور، والياقات، وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق. يجب التعامل مع هيئة الأقمشة المجدولة المصنوعة من الصوف خاصة عن طريق ربطها معاً (باستخدام خيوط) قبل عملية الغسيل. يتم إزالة الخيوط بعد تجفيف الملابس.

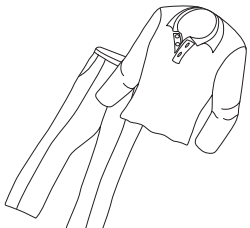

- قد تتسبب المعادن المستخدمة في الملابس في تلفها وكذلك الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت السراويل وسوست الجاكت مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف سلة التنشيف. يجب قفل السوست قبل الغسيل.
- قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسيل.
- اقلب الملابس الرقيقة على ظهرها قبل غسلها.

WA15PALEP-02558E_AR.indd 18 2/26/2008 11:54:53 AM

- اغسل الملابس السوداء والمناشف القطنية كل على حدة. قد تتسخ الملابس في حالة غسلها مع الملابس السوداء. افحص الملابس قبل الغسيل.
- لا يجب طفو الستائر، أوالملابس الخفيفة أو الجينز، في حالة تعويمها. قم بإيقاف الغسالة بالضغط على الزر **تشغيل/إيقاف مؤقت** والضغط على الملابس لأسفل حتى يتم غمرهم في الماء. في حالة استمرار الغسيل مع الملابس العائمة، قد يتسبب ذلك في تلف الملابس والغسالة، كما ينتج عنه نتائج غسيل غير مرضية.

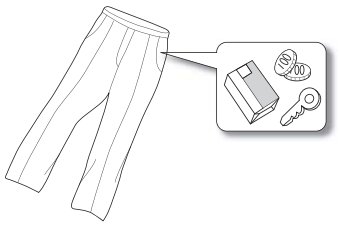

تنبيه

قم بفحص كافة الجيوب قبل الغسيل! قد تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة. من الضروري فحص الجيوب للتأكد من وجود أشياء بها وإزالتها.

لا تقم بغسل الأشياء التالية

- الملابس التي تفقد شكلها بسهولة عند نقعها في الماء.
- أربطة العنق والصدريات والسترات والبدل والمعاطف المصنوع معظمها من الرايون ونوع آخر من مشتقات الألياف المخلطة والتي يمكن أن تفقد شكلها بسهولة (مثل الانكماش وتلطخ ألوان الغسيل).
- يمكن أن تتغير ألوان الأقمشة المعالجة أو المنقوشة أو الصناعية التي تفقد شكلها بسهولة حتى من خلال النقع في الماء.
- وتعتبر الأقمشة المصنوعة من القطن والصوف والحرير المعالج والمنتجات الجلدية والأدوات المصنوعة من الجلود والملابس المزينة بالجلد وملحقاتها من المنتجات التي تفقد لونها بسهولة.
- لا تقم بغسل الملابس المقاومة للماء (مثل ملابس التزحلق على الجليد، وحفاضات الأطفال والممسحات/البطاطين). قد يؤدي ذلك إلى خروج الغسيل أو اهتزاز الغسالة بشكل غير طبيعي مما قد يؤدي إلى إصابة شخصية أو تلف الغسالة أو الأرضية أو الملابس. عند دوران الحوض، قد يبقى الماء داخل الملابس أو الأقمشة المقاومة للماء وقد يتجميع في أحد الأركان مما يؤدي إلى اهتزاز الغسالة بشكل غير طبيعي. وقد يرتفع الغسيل ويخرج من الغسالة مما يؤدي إلى الإصابة.

استخدم شبكة الغسيل لغسيل الأشياء التالية

- استخدم فقط شبكات الغسيل التجارية.
- ضع الملابس الخفيفة في شبكة غسيل.
- قد يتسبب غسيل الملابس ذات الأحجام الكبيرة والأوزان الخفيفة (على سبيل المثال الملابس المزينة بالدانتيل، والملابس النسائية، والمنسوجات المصنوعة من النيلون، إلى آخره) في ارتفاعها إلى أعلى الغسالة ويلحق ضرراً بالملابس نفسها والغسالة. استخدم شبكة الغسيل أو اغسلها على حدة.

- ضع الملابس ذات الخيوط الطويلة والمزينة بالدانتيل، وملاءات السرير والملابس الصوفية في شبكة غسيل قبل غسلها.

WA15PALEP-02558E_AR.indd 19 2/26/2008 11:54:53 AM

غسيل كمية من الملابس

مسحوق الغسيل ومعلومات حول المواد الإضافية

أي مسحوق تقوم باستخدامه

يمكن استخدام المنظفات السائلة والمساحيق. لا تستخدم الصابون فقد يتسخ الحوض من الأوساخ الموجودة عليه.

- عندما لا يذوب المسحوق بالصورة الملائمة، قم باستخدام ماء ساخن لإذابته.
- استخدم كمية مناسبة من المسحوق.

تنبيه: حتى إذا تم الإفراط في استخدام كمية مسحوق الغسيل، فلن تختلف نتيجة الغسيل بدرجة كبيرة. ومع ذلك، فقد يلحق ضرراً بالملابس لأن عملية الشطف قد تكون غير كافية.

- قد تتسبب مواد التبييض في إتلاف الملابس حيث أنها مواد شديدة القلوية.
- قم بشطف الملابس بشكل كاف حيث أن المساحيق المنظفة يمكن أن يظل لها أثر على الملابس مم يتسبب في إحداث ريحة كريهة.
- إذا تم الإفراط في استخدام المسحوق أو الماء البارد، فلن يذوب المسحوق بالكامل وسيظل في الملابس أو الخرطوم أو سلة التنشيف مما يسبب تلوثها.
- لتأجيل التشغيل، يجب إضافة المسحوق إلى درج المسحوق. قد يؤدي انتشار مساحيق البودرة في الغسيل بشكل مباشر إلى تلطخ ألوانها.

درج مسحوق الغسيل

يقع درج مسحوق الغسيل داخل الغسالة في الخلف.

إضافة مسحوق

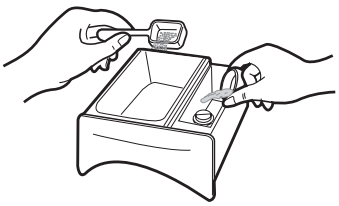

١. افتح درج مسحوق الغسيل ثم قم بإضافة مسحوق البودر إلى حيز المسحوق.
٢. أضف المسحوق بالتساوي حتى لا يفيض على حافة الدرج.

تنبيه:
- استخدم كمية مناسبة من المسحوق.
إذا قمت باستخدام .مسحوق زيادة عن الكمية القياسية أو كانت درجة الحرارة شديدة الانخفاض ولم يتم إذابة المسحوق في الماء بشكل جيد فإن ذلك يتسبب في ترك أثر للمسحوق على الغسيل وفي الخرطوم والحوض، وقد يتسبب في إحداث تلف مثل اتساخ الملابس وفقدان لونها.
- إذا قمت باستخدام مسحوق بودر وظل له أثر على الغسيل، فإن ذلك قد يسبب رائحة كريهة. قم بشطف الغسيل بشكل كاف في ماء نظيف.
- إذا قمت بتوزيع مسحوق بودر على الغسيل مباشرة، فإن ذلك قد ينتج عنه تلطخ ألوان الغسيل. تأكد من إدخال المسحوق في حجيرة المسحوق.

قد يتبقى المسحوق في حجيرة المسحوق في حالة انخفاض ضغط الماء.

إضافة ملين أقمشة

١. عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد الملينات، يتم وضعها في الدورة الأخيرة من الشطف.
٢. لا تستخدم المسحوق، أو المبيض، أو النشا في درج الملين.
٣. يؤدي الإفراط في استخدام الملين إلى نتائج غير مرضية.
٤. لا تفتح الغطاء أثناء دورة التنشيف. إذا تم إضافة ملين الأقمشة في وقت سابق، فإن هذا سينقص من فعاليته.
٥. لا تترك الملين في موزع الملين لمدة طويلة لأنه قد يتجمد.

قد يتبقى ملين الأقمشة في حجيرة الملين في حالة انخفاض ضغط الماء. في تلك الحالة، قم بوضع ملين الأقمشة في الحوض بشكل مباشر.

WA15PALEP-02558E_AR.indd 20 2/26/2008 11:54:54 AM

الغسيل للمرة الأولى

قبل بدء عملية الغسيل، تحقق مما يلي:

١. صل خرطوم تزويد الماء إلى بصنبور الماء. افتح الصنبور. قم بتوصيل الطاقة للغسالة. تأكد أن خرطوم التصريف تم وضعه بشكل صحيح.
٢. قم بتثبيت خرطوم التصريف بشكل صحيح.

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون وضع أية ملابس.

١. اضغط على الزر **الطاقة**.
٢. افتح درج المسحوق وضع قليلاً منه.
٣. قم بتشغيل تزويد الماء للغسالة.
٤. اضغط على الزر **تشغيل/إيقاف مؤقت**.

يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة .

وظيفة التحسس التلقائي

تتميز الغسالة بأنها مزودة بوظيفة التحسس التلقائي الذي يقوم بالتعرف على كمية الغسيل والمستوى المناسب للماء، ووقت الغسيل، ودورة الشطف، ووقت التنشيف.

لا ينطبق ذلك على الملابس الرقيقة، وحوض التنظيف، ودورات النظافة القصوى.

بعد تشغيل الطاقة، وتحديد دورة والضغط على الزر **تشغيل/إيقاف مؤقت** تبدأ لوحة الغسيل في التنشيف بدون ماء. يتعرف هذا الإجراء على حجم الغسيل الموجود في سلة الغسيل، وهذا ليس خللاً في أداء الجهاز. بعد استكمال عملية التحسس، يتم تزويد الماء تلقائياً.

ضع الغسيل في الغسالة وأضف أيضاً المسحوق.

- لا تتجاوز حمل الغسيل في الغسالة. استخدم المسحوق المناسب لنوع الأقمشة التي تقوم بغسلها.
- إذا كان الغطاء مفتوحاً أثناء التشغيل، تتوقف الغسالة عن العمل تلقائيًاً لأسباب تتعلق بالسلامة. (فيما عدا ذلك، يستمر تزويد الماء أثناء فتح الغطاء.)
- عند تحديد الماء الساخن أو البارد، يتم تزويد الماء البارد في الثوان الأولى القليلة لحماية الملابس.
- من الممكن التحكم في وقت الغسيل، ودورة الشطف، ووقت التنشيف لكل دورة أثناء دورة الغسيل.

WA15PALEP-02558E_AR.indd 21 2/26/2008 11:54:54 AM

تنظيف الغسالة وصيانتها

يعمل حفظ الغسالة نظيفة على تحسين أدائها ، وتجنب الإصلاحات غير اللازمة، وزيادة عمر الغسالة.

احتفظ بالحوض نظيفًا

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتريا بالحوض وتكون رواسب مما قد يلحق الضرر بجسم الإنسان. للاحتفاظ بالحوض نظيف وصحي دائمًا، ينصح بقراءة الجزء الخاص بـ "دورة تنظيف الحوض" الموجود في صفحة ١٢ واستخدام المواد المطهرة أو المنظفة الموصى بها لتنظيف الحوض بانتظام مرة واحدة على الأقل كل شهر إلى ثلاثة شهور.

تنظيف مصفاة موصل تزويد الماء

١. إزالة المصفاة وغسلها بدقة.

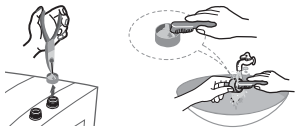

٢. إعادة المصفاة إلى مكانها وتوصيل الخرطوم بأمان بصمام دخول الماء.

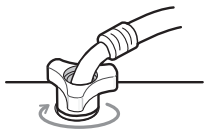

٣. تأكد من وجود أي تسرب للماء.
تأكد من توصيل الموصل بإحكام.

WA15PALEP-02558E_AR.indd 22 2/26/2008 11:54:54 AM

تنظيف شبكة المصفاة

نظف شبكة المصفاة بانتظام للمحافظة على نظافة الغسالة.

١. قم بدفع الجزء العلوي من المصفاة الفعالة لأسفل وجذبه في نفس الوقت.

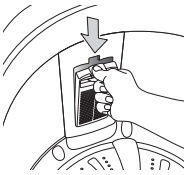

٢. افتح الغطاء كما هو مبين بالشكل.

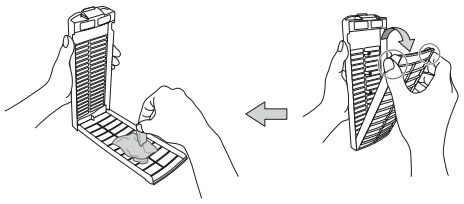

٣. نظف المصفاة الفعالة.

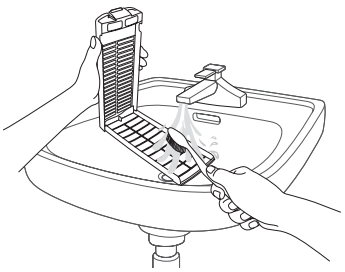

٤. أغلق الغطاء وأدخل أولاً الجزء السفلي من المصفاة في السلة ثم ادفع المصفاة حتى تسمع صوت "تثبيتها".

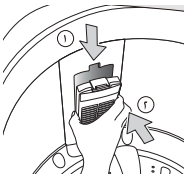

تنظيف مصفاة المضخة

١. ضع قطعة من القماش أو منشفة أسفل مصفاة الغسيل حتى لا تبتل الأرض. ولف المصفاة في عكس اتجاه حركة عقارب الساعة واسحبها للخارج.

٢. قم بإزالة أي أوساخ من المصفاة.

٣. قم بإعادة المصفاة إلى مكانها عن طريق لف المصفاة في اتجاه عقارب الساعة لإعادتها إلى مكانها.

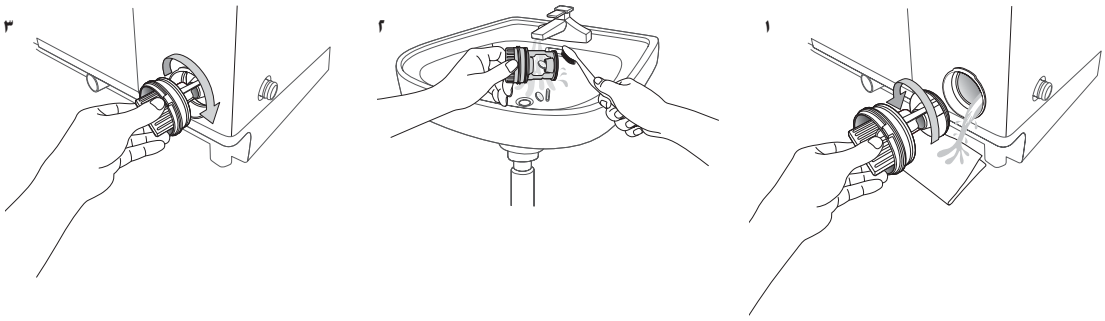

WA15PALEP-02558E_AR.indd 23 2/26/2008 11:54:56 AM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الفحص والحل
لا توجد طاقة.	تأكد هل وحدة التيار الكهربي عادية.
	تأكد من توصيل الغسالة . تأكد من توصيل سلك التيار الكهربي.
	تأكد من عدم تعرض خرطوم التصريف للانثناء أو الطي.
	تأكد من عدم انسداد فتحة خرطوم التصريف.
لا تعمل	هل غطاء الغسالة مفتوح؟ ⊂ أغلق الغطاء.
	هل الزر "توقف" في وضع تشغيل؟ ⊂ اضغط على الزر "تشغيل/إيقاف مؤقت" مرة أخرى وتأكد من بدء تشغيل الغسالة.
	هل تم ملء الماء حتى المستوى المطلوب؟ ⊂ إذا كان ضغط الماء منخفضاً، فستستغرق عملية ملء الغسالة بالماء وقتاً طويلاً.
	هل الصنبور مغلق؟ ⊂ افتح الصنبور لتزويد الماء.
هل خرطوم التصريف وسلة التنشيف متجمدين.	• أضف الماء الساخن إلى صنبور الماء المجمد وأزل خرطوم التصريف. انقعها في الماء الساخن. • اسكب الماء الساخن في سلة التنشيف لمدة ١٠ دقائق. • ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف. • عند فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وتحقق مما إذا كان تصريف الماء يتم بالشكل الملائم.

WA15PALEP-02558E_AR.indd 24 2/26/2008 11:54:56 AM

المشكلة	الفحص والحل
يترسب الماء في وصلة خرطوم تزويد الماء.	إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، قد يتسرب الماء. كرر خطوات التجميع مرة أخرى. (راجع "توصيل خرطوم تزويد الماء")
	تحقق مما إذا كانت حلقة المطاط الخاصة بخرطوم تزويد الماء في وضعها الصحيح. قم بوضعها في مكانها مرة أخرى بإحكام.
	هل خرطوم تزويد الماء مثني؟ فك الثنايا الموجودة في خرطوم التصريف.
	إذا كانت عملية تزويد الماء قوية جداً، قد يحدث تسرب. أغلق الصنبور قليلاً.
	هل حدث تسرب للماء من الصنبور؟ أصلح الصنبور. لا يتم تزويد الماء.
	هل قمت بالضغط على الزر "تشغيل/إيقاف مؤقت" بعد تحديد تزويد الماء؟ يجب الضغط على الزر "تشغيل/إيقاف مؤقت" لتزويد الماء. اضغط على الزر "تشغيل/إيقاف مؤقت".
	تأكد من أن الصنبور في وضع التشغيل. افتح الصنبور.
	هل شبكة المصفاة الموجودة في خرطوم تزويد الماء مسدودة بأوساخ. نظف شبكة المصفاة باستخدام فرشاة أسنان.
	تأكد من أن تزويد الماء في وضع التشغيل. في حالة توقف تزويد الماء، قم بتشغيل الصنبور والتيار الكهربي.
تحدث عملية التنشيف ضجيجاً واهتزازات عالية.	تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة. وزع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى.
	تحقق مما إذا كانت الغسالة متوازنة ومستوية على أرض ثابتة ومسطحة. تأكد أن الغسالة مستوية.
	تأكد هل أرجل الاستواء مربوطة بإحكام. قم بضبط أرجل الاستواء حتى تكون الغسالة في وضع متوازن.
	تأكد من عدم إحاطة الغسالة بأشياء غير ضرورية. قم بإزالة أي شيء غير ضروري بعيداً على الغسالة.

WA15PALEP-02558E_AR.indd 25 2/26/2008 11:54:56 AM

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد تلاحظ رمز المعلومات على الشاشة. في حالة حدوث ذلك، الرجاء فحص هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	المشكلة	الفحص
	لا تعمل	- تأكد أن صنابير المياه في وضع التشغيل. - تأكد من توصيل قابس الغسالة بمصدر التيار الكهربي. - تأكد من تشغيل التيار الكهربي. - تأكد من وجود ماء كافي.
5E	**لا يتم التصريف.**	- هل خرطوم التصريف موضوع لأسفل؟(بدون مضخة) - هل خرطوم التصريف مجمد. - هل خرطوم التصريف مسدود. - إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "5E".
4E	**لا توجد ماء.**	- افتح الصنبور تماماً. - هل تم فصل تزويد الماء عن المنزل؟ - هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟ - هل صنبور الماء مجمد. - في حالة عدم انتهاء مشكلة تزويد الماء في غضون ساعة أو عدم تغيير مستوى الماء في ٤ دقائق، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "4E".
6E 8E	**لا يتم التنشيف.**	- تحقق من توزيع الغسيل بالتساوي في الغسالة. - تحقق أن الغسالة متوازنة وعلى أرض ثابتة ومسطحة.
0E 1E	**عمليات التدفق (الماء).**	- إعادة التشغيل بعد التنشيف. - في حالة استمرار ظهور علامة الخطأ، قم بالاتصال بوكيل خدمة العملاء.

WA15PALEP-02558E_AR.indd 26 2/26/2008 11:54:57 AM

المواصفات

الطراز		WA14PA	WA15PA
أقصى حمولة لتجفيف الملابس بالكيلوجرام		١٢ كجم	١٣ كجم
نوع الغسيل		نوع الحركة	
استهلاك الطاقة	الغسيل	٦٠٠ وات	
	التنشيف	٣٣٠ وات	
الأبعاد (مم)		العرض ٦٣٠ x العمق ٦٧٥ x الارتفاع ١٠١٠	
الوزن		٤٥ كجم	
مستوى الماء القياسي	الأقصى	٨٨ لتر	
	متوسط	٦٤ لتر	
	منخفض-متوسط	٤٥ لتر	
	حد أدنى	٣٥ لتر	
ضغط الماء		٠,٠٥ MPa ~ ٠,٧٨ Mpa (٠,٥ ~ ٨,٠ كجم*قدم/سم٢)	
استخدام الماء		٢٣٠ لتر	
سرعة التنشيف		٦٨٠ دورة في الدقيقة	

WA15PALEP-02558E_AR.indd 27 2/26/2008 11:54:57 AM

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/mea

كود رقم. DC68-02558E_AR